


RYOBI
18 Volt EZ-CLEAN Power Cleaner
Item No. RY120350
Mfg No. 090079483
Replacement Parts List

RYOBI 18V EZ-CLEAN POWER CLEANER – ITEM NO. RY120350

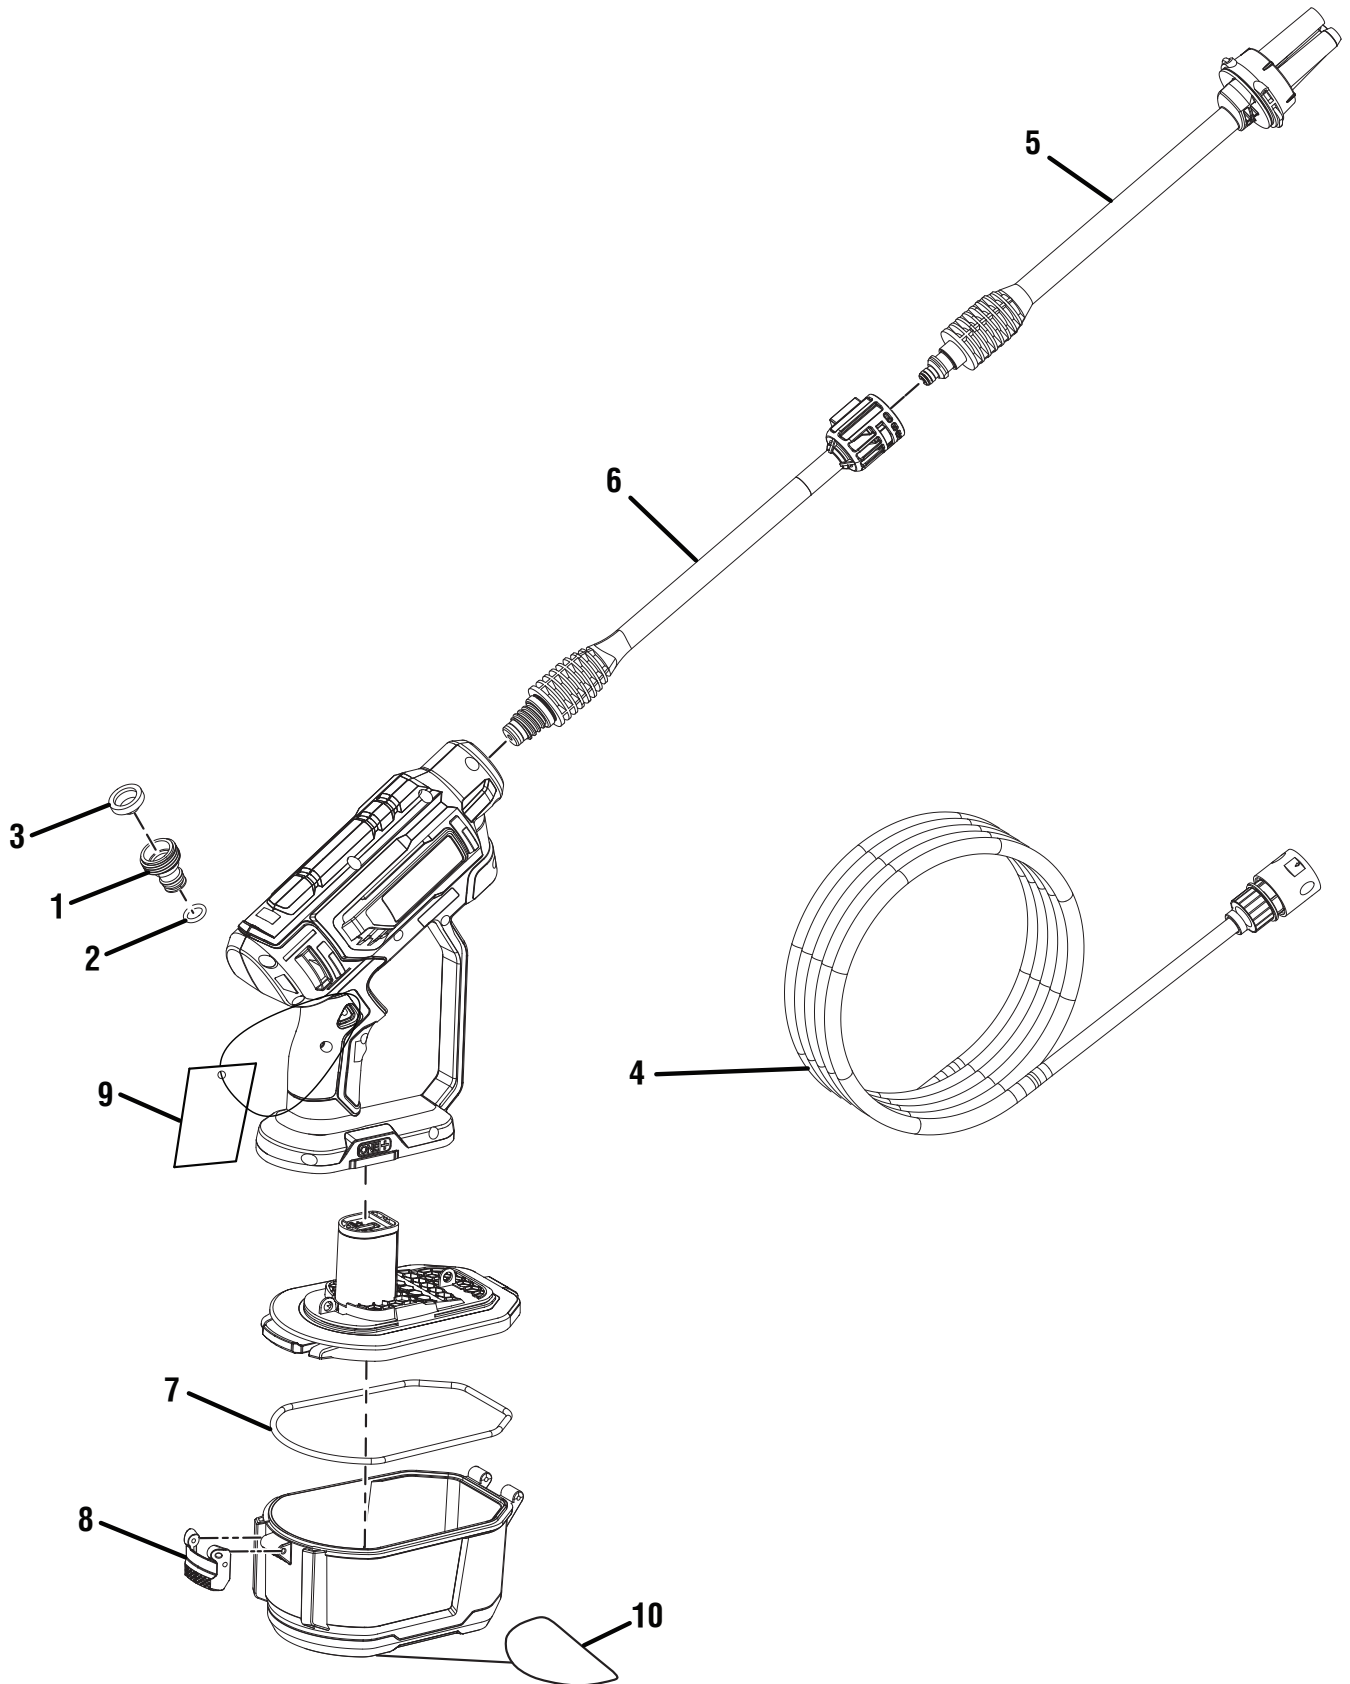

RYOBI 18V EZ-CLEAN POWER CLEANER – ITEM NO. RY120350

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **POWER CLEANER** or when ordering parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	308751017	Inlet Connector	1
2	570742189	O-Ring (ID11.3 x CS2.5)	1
3	308103009	Water Inlet Filter.....	1
4	308835112	Suction Hose Assembly	1
5	310448023	Lower Lance Assembly (With 3-in-1 Nozzle).....	1
6	310448024	Upper Lance Assembly	1
7	570742188	O-Ring Seal (ID142.5 x CS4)	1
8	527932016	Battery Door Latch	1
9	940657337	Danger Hangtag	1
10	940657336	Warning Label.....	1
		NOT SHOWN:	
	998000105	Operator's Manual	