



Quick Setup Guide

2700 MAX PSI* Pressure Washer

Have Questions?
Do not return to store. We can help.
Call Customer Service Toll-Free **1-800-222-3136**
Or visit our website **www.craftsman.com**

▲ WARNING Failure to read and follow the operator's manual and all operating instructions could result in death, serious injury, and/or property damage.

▲ WARNING Fuel and its vapors are extremely flammable and explosive which could cause burns, fire or explosion resulting in death, serious injury and/or property damage. Turn pressure washer engine OFF and let it cool at least 2 minutes before removing fuel cap. Let spilled fuel evaporate before starting engine. Always allow space for fuel expansion.

▲ WARNING Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury. NEVER pull starter cord without first relieving spray gun pressure. Pull starter cord slowly until resistance is felt, then pull rapidly. Firmly grasp spray gun with both hands when using high pressure spray to avoid injury when spray gun kicks back.



▲ WARNING Running engine gives off carbon monoxide, an odorless, colorless, poison gas. Breathing carbon monoxide could result in death, serious injury, nausea or fainting. Operate this product **ONLY** outdoors. DO NOT operate this product inside any building or enclosure, even if windows and doors are open.

▲ WARNING High water pressure could cut through skin resulting in serious injury. Spray gun traps high water pressure, even when engine is stopped and water is disconnected. NEVER aim spray gun at people, animals, or plants. ALWAYS point spray gun in safe direction, press red button and squeeze spray gun trigger to release high pressure, every time you stop engine.

▲ WARNING Risk of eye injury. Spray could splash back or propel objects resulting in serious injury. Always wear indirect vented (chemical splash) safety goggles marked to comply with ANSI Z87.1 when using or in vicinity of this equipment. NEVER substitute safety glasses or dry-condition goggles for indirect vented safety goggles.

Items Included:

Operator's Manual and Standard Siphon Hose (not shown)

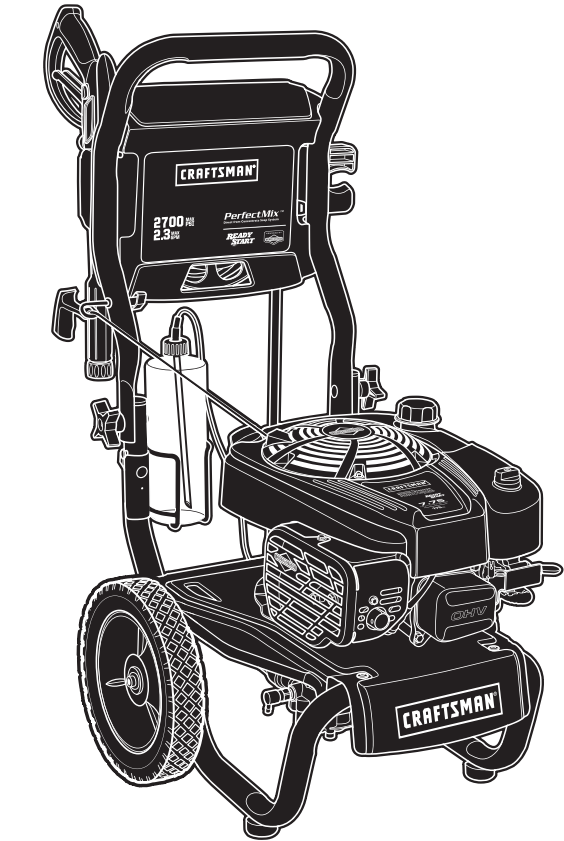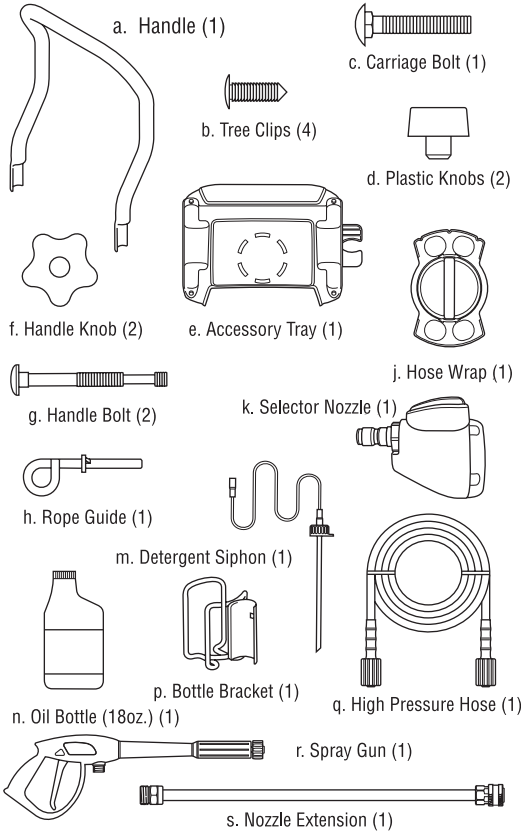

You will need:

- Utility knife
- Unleaded fuel
- Garden hose, 50 feet (15 m) or less
- Safety goggles (indirect vented type)

Unpack Pressure Washer

1. Remove everything from carton except pressure washer.
2. Open carton completely by cutting each corner from top to bottom.
3. Ensure you have all included items prior to assembly. If items are damaged or missing, call **1-800-222-3136**.
4. Prior to assembly, lubricate all o-ring connections as described in operators manual.

Assemble Pressure Washer

1. Place handle (A) onto handle supports (B) connected to main unit. Make sure holes (C) in handle align with holes (C) on handle supports. **1**
2. Insert handle carriage bolts (D) through holes from inside of unit and attach a plastic knob (E) from outside of unit. Tighten by hand. By loosening both knobs to middle section of attachment bolt, the upper handle can fold forward to store flat atop the cold engine. **2**

NOTICE DO NOT fold handle down while the engine is hot.


3. Place accessory tray (F) over holes (G) on handle (viewing from back of unit). Push the tree clips (H) into the holes until they sit flat against the accessory tray. **3**
4. Insert rope guide (J) through handle and secure with plastic knob (K). Tighten by hand. Route engine recoil rope through guide. **4**
5. Align hose wrap (L) to the back side of accessory tray. Locate notch with "unlock" icon (M) on hose wrap. Position notch at top with hose wrap in vertical position. Clips in the back of accessory tray should slide into the grooves on the inside surface of hose wrap. Slide hose wrap on back of accessory tray and rotate 1/8 turn until "locked" icon (N) is in vertical position. **5**
6. Attach bottle bracket (M) to handle with carriage bolt (N) and plastic knob (K). Tighten by hand. **6**

2-IN-1 Soap System

1. The pressure washer is equipped with two detergent siphoning tubes. **Project Pro® PerfectMix™ Siphon:** Blue tube with blue bottle cap: When using blue PerfectMix™ siphon (P), use PerfectMix™Extreme Concentrate straight from bottle. **7**
Standard Siphon Tube: Clear tube with filter: When using clear standard siphon tube (Q), dilute 1 part PerfectMix™ Extreme Concentrate to 16 parts water (4 oz of concentrate makes 1/2 gallon of mix). **7**

Attach Project Pro® PerfectMix™ Siphon to Pump and Concentrate Bottle

1. Place PerfectMix™ bottle (R) (not included) in wire-form bracket on handle. Remove cap from bottle and insert PerfectMix™ Siphon (P). Screw siphon unit to top of bottle. Use clip on cap (S) to snap siphon to wire form bracket when siphon is not in a concentrate bottle. **7**
2. Attach hose end of blue Project Pro® PerfectMix™ Siphon (P) to barbed hose fitting (T) on pump. **8**

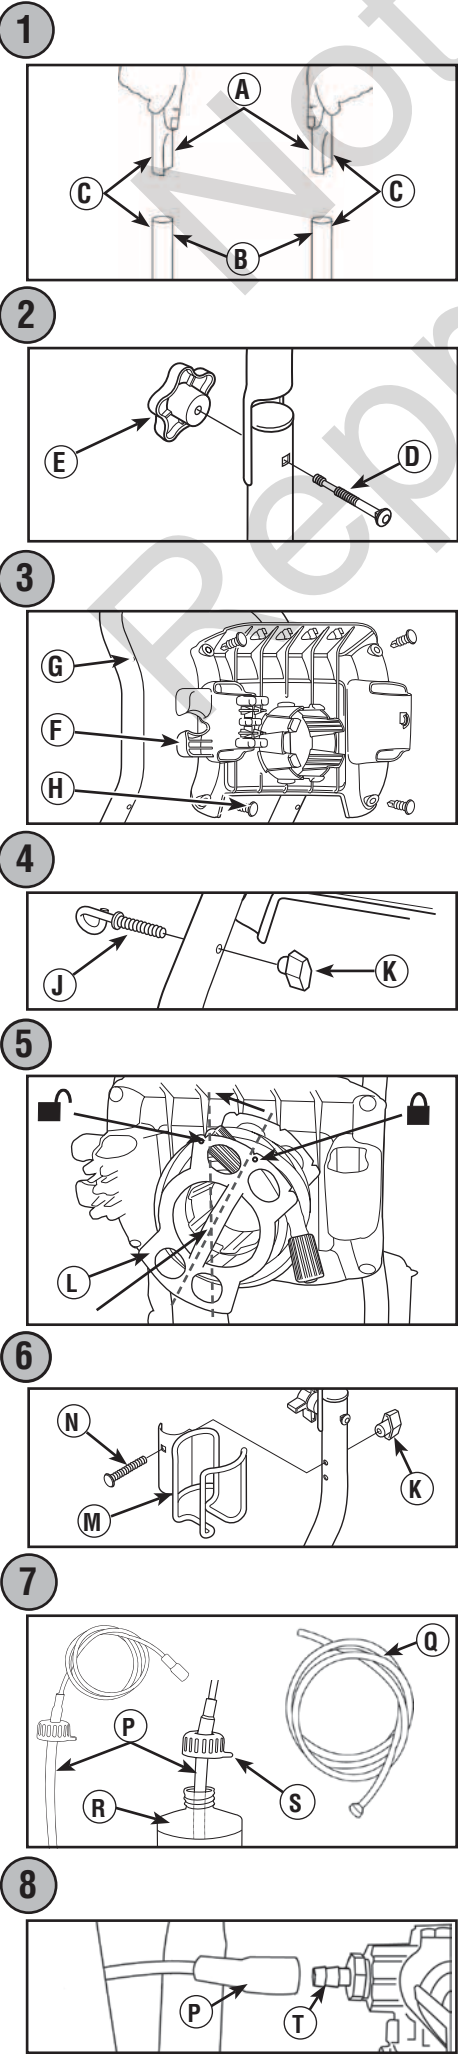

Add Engine Oil and Fuel

NOTICE You MUST properly fill engine with oil before attempting to start pressure washer.

NOTICE DO NOT use E85 fuel.

NOTICE DO NOT mix oil with fuel.

1. Move pressure washer outdoors to a flat, level surface.
2. Clean area around oil fill and remove oil fill cap/dipstick (W). **9**
3. Using oil funnel (optional), slowly pour contents of supplied oil into oil fill opening, frequently checking oil level. DO NOT OVERFILL. **10**
4. Replace and fully tighten oil fill cap/dipstick.
5. Clean area around the fuel cap (V), remove fuel cap. **9**
6. Slowly add clean, fresh, UNLEADED fuel (U) to fuel tank (V). Be careful not to overfill. To allow for fuel expansion, do not fill above the bottom of the fuel tank neck. **11**
7. Replace fuel cap. Let any spilled fuel evaporate before starting engine.

Move Pressure Washer to Safe Operating Location



▲ WARNING Running engine gives off carbon monoxide, an odorless, colorless, poison gas. Breathing carbon monoxide could result in death, serious injury, nausea or fainting. Operate this product **ONLY** outdoors. DO NOT operate this product inside any building or enclosure, even if windows and doors are open.

1. Move pressure washer outdoors to a flat, level surface.
2. Running engines give off carbon monoxide. Keep at least 5 ft. (1.5 m) clearance on all sides of pressure washer including overhead to reduce the risk of exhaust heat or exhaust gases igniting nearby combustible material. **12**

Connect Spray Gun

NOTICE Remove and discard 2 shipping caps from high pressure outlet and garden hose inlet connections.

1. Uncoil high pressure hose (X) and attach one end of hose to base of spray gun (W). Tighten by hand. **13**
2. Attach other end of high pressure hose (X) to high pressure outlet (Y) on pump. Tighten by hand. **14**

Connect Water Supply

NOTICE DO NOT use pressure washer if inlet screen is damaged or missing, call **1-800-222-3136**.

1. Inspect garden hose inlet screen (Z) for damage. **15**
2. Clean screen if it contains debris or have it replaced if damaged.
3. Run cold water through garden hose for 30 seconds to clean out any debris. Connect garden hose (AA) (not to exceed 50 feet in length) to water inlet (BB). Tighten by hand. **15**

Start Pressure Washer

NOTICE You MUST connect and turn on water supply fully before starting engine.



▲ WARNING Risk of eye injury. Spray could splash back or propel objects resulting in serious injury. Always wear indirect vented (chemical splash) safety goggles marked to comply with ANSI Z87.1 when using or in vicinity of this equipment. NEVER substitute safety glasses or dry-condition goggles for indirect vented safety goggles.

1. Put on safety goggles.
2. Turn on water supply.
3. Press red button (CC) on spray gun and pull trigger until water comes out in a steady stream. Release trigger to locked position. **16**
4. Attach nozzle extension (DD) to spray gun (W). **17**
5. Pull back on collar of nozzle extension (DD), insert selector nozzle (EE) and release collar. Tug on selector nozzle to make sure it is securely in place. For 5 in1 Selector Nozzle instructions, see operator's manual. **18**
6. Push engine rocker switch (FF) to on position (I or On). **19**

NOTICE This unit is equipped with a ReadyStart® engine. A ReadyStart® engine means there is no priming or choking required.



▲ WARNING Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury. NEVER pull starter cord without first relieving spray gun pressure. Pull starter cord slowly until resistance is felt, then pull rapidly. Firmly grasp spray gun with both hands when using high pressure spray to avoid injury when spray gun kicks back.

7. When starting engine, position yourself as recommended and grasp starter grip handle and pull slowly until you feel some resistance. Then pull rapidly to start engine. **20**
8. Return starter grip handle slowly. DO NOT let rope "snap back" against starter.
9. After each starting attempt, where engine fails to run, always point gun in safe direction, press red button and squeeze spray gun trigger to release high pressure.
10. Point gun toward surface to be cleaned. Push red button and pull trigger to begin spraying.

Stop Pressure Washer

1. Let engine idle for 2 minutes.
2. Push engine rocker switch (FF) to off position (O or OFF). **19**
3. Turn off water supply.
4. Point spray gun in safe direction, press red button, and squeeze spray gun trigger to relieve retained high water pressure.
5. Disconnect garden hose from pump.
6. Disconnect high pressure hose from pump and gun for storage. For long term storage instructions, see operator's manual.
7. Remove safety goggles.

