



Quick Setup Guide


Pressure Washer

Have Questions?
Do not return to store. We can help.
Call Customer Service Toll-Free 1-800-222-3136
Or visit our website www.craftsman.com

- ⚠ WARNING** Failure to read and follow the operator's manual and all operating instructions could result in death or serious injury.
- ⚠ WARNING** Fuel and its vapors are extremely flammable and explosive which could cause burns, fire or explosion resulting in death or serious injury. Turn pressure washer engine OFF and let it cool at least 2 minutes before removing fuel cap. Let spilled fuel evaporate before starting engine. Always allow space for fuel expansion.
- ⚠ WARNING** Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury. NEVER pull starter cord without first relieving spray gun pressure. Pull starter cord slowly until resistance is felt, then pull rapidly. Firmly grasp spray gun with both hands when using high pressure spray to avoid injury when spray gun kicks back.

- ⚠ WARNING** Engine exhaust contains carbon monoxide, a poisonous gas that could kill you in minutes. You CANNOT smell it, see it, or taste it. Operate ONLY outside far away from windows, doors and vents. Install carbon monoxide alarms. DO NOT run this product inside homes or garages, even if using fans or opening doors and windows.
- ⚠ WARNING** High water pressure could cut through skin resulting in serious injury. Spray gun traps high water pressure, even when engine is stopped and water is disconnected. NEVER aim spray gun at people, animals, or plants. ALWAYS point spray gun in safe direction, press red button and squeeze spray gun trigger to release high pressure, every time you stop engine.
- ⚠ WARNING** Risk of eye injury. Spray could splash back or propel objects resulting in serious injury. Always wear indirect vented (chemical splash) safety goggles marked to comply with ANSI Z87.1 when using or in vicinity of this equipment. NEVER substitute safety glasses or dry-condition goggles for indirect vented safety goggles.

Items Included: Operator's Manual (not shown)

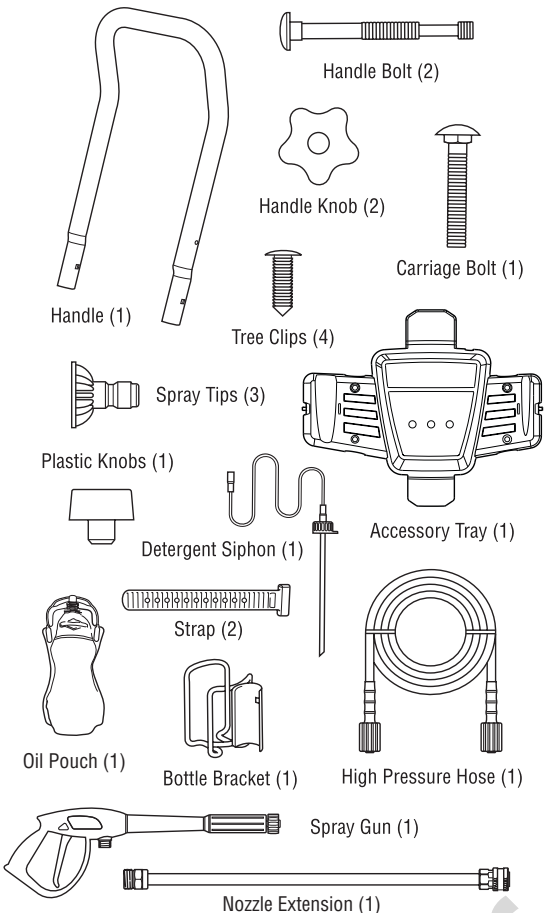

Items you will need (NOT included):

- Utility knife
- Unleaded fuel
- Garden hose, 50 ft. (15 m) or less
- Safety goggles (indirect vented type)
- Petroleum or synthetic grease

Unpack Pressure Washer

1. Remove everything from carton except pressure washer.
2. Open carton completely by cutting each corner from top to bottom.
3. Ensure you have all included items prior to assembly. If items are damaged or missing, call **1-800-222-3136**.
4. Prior to assembly, lubricate rubber o-ring seals on all connections with petroleum or synthetic grease. See Operator's Manual, *Lubricate O-Rings*. **11 12 13 15 16**


Assemble Pressure Washer

1. Place handle (A) onto handle supports connected to main unit. Make sure holes in handle align with holes on handle supports. **1**
2. Insert handle carriage bolts (B) through holes from inside of unit and attach a plastic knob (C) from outside of unit. Tighten by hand. **1**
- NOTICE** By loosening both knobs to the middle section of the attachment bolt, the upper handle can fold forward to store flat atop the cold engine. DO NOT fold the handle down while the engine is hot.
3. Insert rubber straps (D) through slots (E) in back of accessory tray and pull tight from front. **2**
4. Place accessory tray (F) over holes (G) on handle (viewing from front of unit). Push the tree clips (H) into the holes until they sit flat against the accessory tray. **3**
5. Insert multi-colored quick connect spray tips and other supplied accessories in spaces provided in accessory tray. See Operator's Manual, *How to Use Accessory Tray*.
6. Attach bottle bracket (J) to handle with carriage bolt (K) and black plastic knob (L). Tighten by hand. **4**

Attach PerfectMix™ Siphon to Pump and Concentrate Bottle

1. Place PerfectMix™ bottle (M) (not included) in wire-form bracket on handle. Remove cap from bottle and insert PerfectMix™ Siphon (N). Screw siphon unit to top of bottle. Use clip on cap (P) to snap siphon to wire form bracket when siphon is not in a concentrate bottle. **5**
2. Attach tube end of blue PerfectMix™ Siphon (N) to barbed tube fitting (R) on pump. **6**

For tips on how to set up and use your pressure washer, scan this code with your Smartphone (data rates apply).

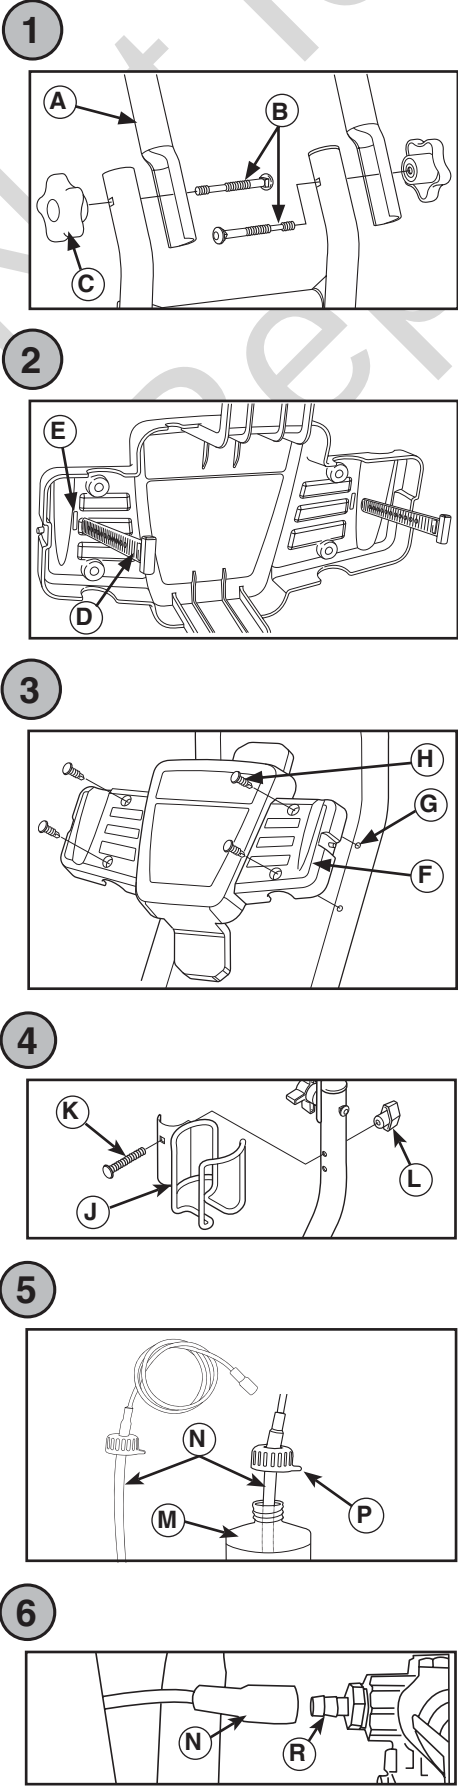

Add Engine Oil and Fuel

- NOTICE** You MUST properly fill engine with oil before attempting to start pressure washer.
- NOTICE** DO NOT use unapproved gasoline such as E15 and E85. DO NOT mix oil in gasoline or modify engine to run on alternate fuels.
1. Move pressure washer outdoors to a flat, level surface.
 2. Clean area around oil fill and remove oil fill cap/dipstick (↺). **7**
 3. Hold neck of supplied oil pouch and remove cap.
 4. Slowly pour contents of oil pouch into oil fill opening. Checking oil level frequently, fill to FULL mark (top hole) on dipstick. **8**
 - NOTICE** Pause to permit oil to settle. Wipe dipstick clean each time oil level is checked. DO NOT overfill.
 5. Replace and fully tighten oil fill cap/dipstick.
 6. Clean area around the fuel cap (⬛), remove fuel cap. **7**
 7. Slowly add clean, fresh, UNLEADED fuel to fuel tank. Be careful not to overfill. Allow about 1.5 in. (4 cm) of tank space (S) for fuel expansion. **9**
 8. Replace fuel cap and let any spilled fuel evaporate before starting engine.

Move Pressure Washer to Safe Operating Location

- ⚠ WARNING** Engine exhaust contains carbon monoxide, a poisonous gas that could kill you in minutes. You CANNOT smell it, see it, or taste it. Operate ONLY outside far away from windows, doors and vents. Install carbon monoxide alarms. DO NOT run this product inside homes or garages, even if using fans or opening doors and windows.

1. Move pressure washer outdoors to a flat, level surface. **10**
2. Keep at least 5 ft. (1.5 m) clearance on all sides of pressure washer including overhead to reduce the risk of exhaust heat or exhaust gases igniting nearby combustible material.

Connect Spray Gun

NOTICE Remove and discard the shipping caps from the pump's high pressure outlet and water inlet before attaching hoses

1. Uncoil high pressure hose (T) and attach one end of hose to base of spray gun (U). Tighten by hand. **11**
2. Attach other end of high pressure hose (T) to high pressure outlet (V) on pump. Tighten by hand. **12**

Connect Water Supply

NOTICE If inlet screen is damaged or missing. DO NOT use pressure washer, call **1-800-222-3136**.

1. Before connecting garden hose to water inlet, inspect inlet screen (W). Clean screen if it contains debris or have it replaced if damaged. DO NOT run pressure washer if inlet screen is damaged. **13**
2. Run cold water through garden hose for 30 seconds to clean out any debris. Connect the garden hose (X) (not to exceed 50 ft. (15 m) in length) to the water inlet (Y). Tighten by hand. **13**

Start Pressure Washer

NOTICE You MUST connect and turn on water supply fully before starting engine.

- ⚠ WARNING** Risk of eye injury. Spray could splash back or propel objects resulting in serious injury. Always wear indirect vented (chemical splash) safety goggles marked to comply with ANSI Z87.1 when using or in vicinity of this equipment. NEVER substitute safety glasses or dry-condition goggles for indirect vented safety goggles.

1. Put on safety goggles.
2. Turn on water supply.
3. Turn ON the water, press red button (Z) on the gun and squeeze the trigger to purge the pump system of air and impurities. **14**
4. Attach nozzle extension (AA) to spray gun (U). **15**
5. Choose desired spray tip (BB), pull back on collar of nozzle extension (AA). Insert spray tip and release collar. Tug on spray tip to make sure it is securely in place. **16**
6. Move throttle lever (CC) to FAST (↻) position. **17**

NOTICE This unit is equipped with a ReadyStart® engine. A ReadyStart® engine means there is no priming or choking required.

- ⚠ WARNING** Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury. NEVER pull starter cord without first relieving spray gun pressure. Pull starter cord slowly until resistance is felt, then pull rapidly. Firmly grasp spray gun with both hands when using high pressure spray to avoid injury when spray gun kicks back.

7. When starting engine, position yourself as recommended. Grasp starter grip handle and pull slowly until you feel some resistance. Then pull rapidly to start engine. **18**
- NOTICE** After each starting attempt, where engine fails to run, always point gun in safe direction press red safety button and squeeze spray gun trigger to release high pressure.
- NOTICE** Always keep the throttle lever in the FAST (↻) position when operating the pressure washer.
8. Point gun toward surface to be cleaned. Press red safety button and pull trigger to begin spraying.

Stop Pressure Washer

1. Release spray gun trigger and let engine idle for two minutes.
2. Move throttle lever (CC) to SLOW (↲) position, then STOP (●) position. **17**
3. Turn off water supply.
4. Always point spray gun in safe direction, push red button, and squeeze spray gun trigger to relieve retained high water pressure.
5. Disconnect garden hose from pump.
6. Disconnect high pressure hose from pump and gun for storage. For long term storage instructions, see operator's manual.
7. Remove safety goggles.

