


OPERATOR'S MANUAL



1700 PSI / 1.4 GPM ELECTRIC PRESSURE WASHER

Model No.
138.75275

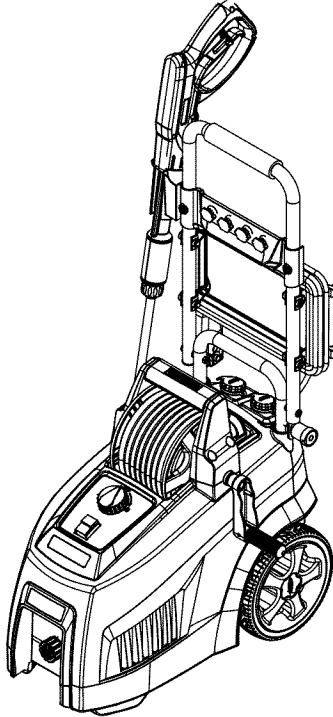

- Safety
- Operation
- Maintenance
- Troubleshooting
- Español

⚠ WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

Customer Help Line: 1-888-266-7096

Sears Brands Management Corporation, Hoffman Estates, IL 60179 U.S.A.
Visit the Craftsman web page: www.craftsman.com.

Save this manual for future reference

TABLE OF CONTENTS

| | |
|------------------------------------|-------|
| Important Safety Instructions..... | 3 |
| Specific Safety Rules..... | 3-4 |
| Symbols..... | 5-6 |
| Electrical..... | 7 |
| Know Your Pressure Washer..... | 8 |
| Assembly..... | 8-9 |
| Operation..... | 10-12 |
| Maintenance..... | 13-14 |
| Troubleshooting..... | 15-17 |
| Instruction Illustrations..... | 18-19 |
| Exploded View..... | 20 |
| Parts List..... | 20-22 |

WARRANTY

CRAFTSMAN ONE YEAR FULL WARRANTY

FOR ONE YEAR from the date of purchase, this product is warranted against any defects in material or workmanship. A defective product will be replaced free of charge.

For warranty coverage details to obtain free replacement, visit the web site: www.craftsman.com

This warranty does not cover the nozzles or rotary brush, which are expendable parts that can wear out from normal use within the warranty period.

This warranty is void if this product is ever used while providing commercial services or if rented to another person.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

⚠ WARNING! When using this product basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- **Be thoroughly familiar with controls.** Know how to stop the product and release pressure quickly.
- **Stay alert and exercise control.** Watch what you are doing and use common sense. Do not operate product when you are tired. Do not rush.
- **Do not operate the product while under the influence of drugs, alcohol, or any medication.**
- **Keep the area of operation clear of all persons, particularly small children, and pets.**
- **Don't overreach or stand on unstable**

support. Keep proper footing and balance at all times.

- **Follow the maintenance instructions specified in this manual.**
- **This product is provided with a ground fault circuit interrupter built into the power cord plug.** If replacement of the plug or cord is needed, use only identical replacement parts.

⚠ WARNING! Risk of injection or injury
– Do not direct discharge stream at people or animals.

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

- This pressure washer is provided with a ground fault circuit interrupter (GFCI) built into the plug of the power supply cord. This device provides additional protection from the risk of electric shock. Should replacement of the plug or cord become necessary, use only identical replacement parts that include GFCI protection.

EXTENSION CORDS

- Do not use with extension cord. Plug directly into receptacle.

⚠ WARNING! To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands.

SPECIFIC SAFETY RULES

- **Know your product.** Read the operator's manual carefully. Learn the machine's applications and limitations as well as the specific potential hazards related to this product.
- **To reduce the risk of injury, keep children and visitors away.** All visitors should wear safety glasses and be kept a safe distance from work area.
- **Use right product.** Don't force product or attachment to do a job it was not designed for. Don't use it for a purpose not intended.
- **Dress properly.** Do not wear loose clothing, gloves, neckties, or jewelry. They can get caught and draw you into moving parts. Rubber gloves and nonskid footwear are recommended when working outdoors. Also wear protective hair covering to contain long hair.
- **Do not operate the equipment while barefoot or when wearing sandals or similar lightweight footwear.** Wear protective footwear that will protect your feet and improve your footing on slippery surfaces.
- **Exercise caution to avoid slipping or falling.**
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1.** Following this rule will reduce the risk of serious personal injury.
- **Use only recommended accessories.** The use of improper accessories may cause risk of injury.
- **Check damaged parts.** Before further use of the product, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving

SPECIFIC SAFETY RULES

parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged must be properly repaired or replaced by an authorized service center to avoid risk of personal injury.

- **Never leave product running unattended.** Turn power off. Don't leave product until it comes to a complete stop.
- **Keep the motor free of grass, leaves, or grease** to reduce the chance of a fire hazard.
- **Follow manufacturer's recommendations for safe loading, unloading, transport, and storage of machine.**
- **Keep product dry, clean, and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any solvents to clean product.
- **Check the work area before each use.** Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the machine.
- **Do not use product if switch does not turn it off.** Have defective switches replaced by an authorized service center.
- **Avoid dangerous environment.** Don't expose to rain. Keep work area well lit.
- **Do not abuse the cord.** Never use the cord to carry the product or to disconnect the plug from an outlet. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.
- **Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for the product.** Receptacles are available having built-in GFCI protection and may be used for this measure of safety.
- **Never direct a water stream toward people or pets, or any electrical device.**
- **Before starting any cleaning operation,** close doors and windows. Clear the area to be cleaned of debris, toys, outdoor furniture, or other objects that could create a hazard.
- **Do not use acids, alkalines, solvents, flammable material, bleaches, or industrial grade solutions** in this product. These products can cause physical injuries to

the operator and irreversible damage to the machine.

⚠ WARNING! High pressure jets can be dangerous if subject to misuse. The jet must not be directed at people, animals, electrical devices, or the machine itself.









- **Keep the motor away from flammables and other hazardous materials.**
- **Check bolts and nuts for looseness** before each use. A loose bolt or nut may cause serious motor problems.
- **Before storing,** allow the motor to cool.
- **When servicing use only identical replacement parts.** Use of any other parts may create a hazard or cause product damage.
- **ONLY** use cold water.
- **Make sure minimum clearance** of 3 feet is maintained from combustible materials.
- **Connect pressure washer only to an individual branch circuit.**
- **Hold the handle and wand securely with both hands.** Expect the trigger handle to move when the trigger is pulled due to reaction forces. Failure to do so could cause loss of control and injury to yourself and others.
- **Save these instructions.** Refer to them frequently and use them to instruct other users. If you loan someone this product, loan them these instructions also.

⚠ WARNING! Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:


- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically-treated lumber. Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

SYMBOLS




Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

| SYMBOL | NAME | DESIGNATION/EXPLANATION |
|---|------------------------|---|
| V | Volts | Voltage |
| A | Amperes | Current |
| Hz | Hertz | Frequency (cycles per second) |
| W | Watt | Power |
| no | No Load Speed | Rotational speed, at no load |
| ~ | Alternating Current | Type of current |
| .../min | Per Minute | Revolutions, strokes, surface speed, orbits etc., per minute |
|  | Class II Construction | Double-insulated construction |
|  | Safety Alert | Indicates a potential personal injury hazard. |
|  | Read Operator's Manual | To reduce the risk of injury, user must read and understand operator's manual before using this product. |
|  | Eye Protection | Always wear eye protection with side shields marked to comply with ANSI Z87.1. |
|  | Wet Conditions Alert | Do not expose to rain or use in damp locations. |
|  | Risk of Injection | To reduce the risk of injection or injury, never direct a water stream towards people or pets or place any body part in the stream. Leaking hoses and fittings are also capable of causing injection injury. Do not hold hoses or fittings. |
|  | Kickback | To reduce the risk of injury from kickback, hold the spray wand securely with both hands when the machine is on. |
|  | Electric Shock | Failure to use in dry conditions and to observe safe practices can result in electric shock. |

SYMBOLS

| SYMBOL | NAME | DESIGNATION/EXPLANATION |
|---|----------------|---|
|  | Chemical Burns | To reduce the risk of injury or damage, DO NOT USE ACIDS, ALKALINES, BLEACHES, SOLVENTS, FLAMMABLE MATERIAL, OR INDUSTRIAL GRADE SOLUTIONS in this product. |

The following signal words and meanings are intended to explain the levels of risk associated with this product.

| SYMBOL | SIGNAL | MEANING |
|---|----------------|--|
|  | DANGER | Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. |
|  | WARNING | Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury. |
|  | CAUTION | Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. |
| | CAUTION | (Without Safety Alert Symbol) Indicates a situation that may result in property damage. |

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest Craftsman or other qualified service dealer for repair. When servicing, use only identical replacement parts.

⚠ WARNING! To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. If you do not understand the warnings and instructions in the operator's manual, do not use this product. Call the Customer Help Line for assistance at 1-888-266-7096.

WARNING!



The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full face shield. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

ELECTRICAL

⚠ WARNING! The double insulated system is intended to protect the user from shock resulting from a break in the product's internal insulation. Observe all normal safety precautions to avoid electrical shock.

ELECTRICAL CONNECTION

This product has a precision-built electric motor. It should be connected to a power supply that is 120 volts, AC only (normal household current), 60 Hz. Do not operate this product on direct current (DC). A substantial voltage drop will cause a loss of power and the motor will overheat. If the product does not operate when plugged into an outlet, double-check the power supply.

DRIP LOOP (See Figure 1.)

To prevent water from flowing along the power cable, and possibly reaching the electrical outlet and plug, we recommend using a simple drip loop as shown in Figure 1 of INSTRUCTION ILLUSTRATIONS..

⚠ WARNING! Keep the cord clear of the working area. Position the cord so that it will not get caught on lumber, tools, or other obstructions while you are working with a power tool. Failure to do so can result in serious personal injury.

GROUND FAULT CIRCUIT INTERRUPTER

This unit is equipped with a Ground Fault Circuit Interrupter (GFCI), which guards against the hazards of ground fault currents. An example of ground fault current is the current that would flow through a person who is using an appliance with faulty insulation and, at the same time, is in contact with an electrical ground such as a plumbing fixture, wet floor, or earth.

GFCI plugs do not protect against short circuits, overloads, or shocks.

To test:

- Depress the TEST button. This should cause the RESET button to pop out.
- To restore power, depress the RESET button.

⚠ WARNING!

- Plug into receptacle
 - If light is not on, press reset button - light should come on
 - Press test button - light must go off
 - Press reset button again for use
- Do not use if test fails.

Do not use an extension cord to supply power. Do not immerse.

Perform this test monthly to ensure proper operation of the GFCI.

KNOW YOUR PRESSURE WASHER

Refer to the INSTRUCTION ILLUSTRATIONS section of this Operator's Manual for diagrams and locations of the parts and features listed below.

The safe use of this product requires an understanding of the information on the tool and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules. (See *Figure 2.*)

DETERGENT TANK

Remove the cap from the detergent tank to add detergent to the pressure washer.

GFCI PLUG

The pressure washer is equipped with a GFCI plug to guard against the hazards of ground fault currents. This plug does not protect against short circuits, overloads, or shocks.

HIGH PRESSURE HOSE STORAGE REEL

A convenient hose reel stores the high pressure hose when the pressure washer is not in use.

ON / OFF SWITCH

This switch turns the pressure washer on and off.

POWER CORD STORAGE REEL

Store the power cord on the convenient storage reel when the pressure washer is not in use. Rotate the reel face counterclockwise and remove for quick release of the cord.

FOLDING HANDLE

The folding handle allows the handle to be lowered for convenient storage.

TRIGGER HANDLE

The trigger handle has a gripping surface that provides added control of the spray wand and helps reduce fatigue.

TRIGGER WITH LOCK-OUT

Pulling the trigger releases a stream of water for high pressure cleaning. The lock-out provides protection against unauthorized use.

ASSEMBLY

See the INSTRUCTION ILLUSTRATIONS section of this Operator's Manual for the Figures referenced in the instructions below.

UNPACKING

This product requires assembly.

- Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

⚠ WARNING! Do not use this product if any parts on the Packing List are already assembled to your product when you unpack

it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call 1-800-932-3188 for assistance.

ASSEMBLY

PACKING LIST

| |
|---|
| Pressure washer with 25 ft. high pressure hose |
| Operator's manual |
| Metal spray gun |
| 4 quick connect nozzles (stream, narrow fan, wide fan and soap) |
| Bonus turbo nozzle |
| Bonus rotating brush |

⚠ WARNING! If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

⚠ WARNING! Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

⚠ WARNING! Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

OPERATING THE HANDLE ASSEMBLY (See Figure 3.)

- Open for use: Lift up on the handle bar pivoting it towards the back into an upright position until it clicks and locks into place.
- Pull the release button on the handle assembly out sideways and lift up the handle until it clicks into place.
- To fold the handle, pull the latch sideways again, and push the handle down.

ASSEMBLING THE SPRAY WAND (See Figure 4.)

- Push the end of the spray wand into the trigger handle and rotate clockwise to secure.
- Pull on the spray wand to be certain it is properly secured.
- Place the assembled spray wand in the spray wand holder.

CONNECTING HIGH PRESSURE HOSE

TO TRIGGER HANDLE (See Figure 5.)

- Slide the hose lock forward to open.
- Connect the high pressure hose to the trigger handle. Insert high pressure hose into trigger handle.

CONNECTING THE GARDEN HOSE (See Figure 6.)

⚠ CAUTION :

Always observe all local regulations when connecting hoses to the water main. Some areas have restrictions against connecting directly to public drinking water supply to prevent the feedback of chemicals into the drinking water supply. Direct connection through a receiver tank or backflow preventer is usually permitted.

Connect garden hose to pressure washer water intake.

- Uncoil the garden hose from the storage reel.

NOTE: There must be a minimum of 10 feet of unrestricted garden hose between the water intake and the garden hose faucet or shut off valve (such as a "Y" shut off connector).

- Run water through the garden hose for 30 seconds to clean any debris from the hose.
- Inspect the screen in the water intake.

INSTALLING THE ROTATING BRUSH

- Turn off the pressure washer and shut off the water supply. Pull trigger to release pressure.
- Engage the lock-out on the trigger handle by pushing the trigger lock button to the right.
- To assemble the rotating brush, insert the brush wand into the pressure washer wand, and twist.

Applications: Ideal for cleaning most smooth surfaces, including vehicles, boats, outdoor furniture, fabrics, plastics, fiberglass, glass, and windows.

⚠ WARNING! To reduce the risk of injury, user must read and understand the operator's manual for this pressure washer and this accessory. Wear eye protection marked to comply with Z87.1. Ensure compatibility and fit before using this accessory. Turn off the pressure washer before changing or adjusting accessories. For cold water use only. Do not use this accessory if damaged or if a part is missing. Dirt and debris can damage delicate surfaces. Thoroughly rinse the brush before use and continue to do so at regular intervals during use. Thoroughly clean the brush after use. Allow to dry and always store brush without bending the bristles. Save these instructions. Refer to them frequently and use them to instruct other users. If you loan someone this tool, loan them these instructions also.

OPERATION

- If the screen is damaged, do not use the machine until the screen has been replaced.
- If the screen is dirty, clean it before connecting the garden hose to the machine.
- With the hose faucet turned completely off, attach the end of the garden hose to the water intake. Tighten by hand.

See the INSTRUCTION ILLUSTRATIONS section of this Operator's Manual for the Figures referenced in the instructions below.

⚠ WARNING! Do not allow familiarity with the product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

⚠ WARNING! Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.

⚠ WARNING! Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

⚠ WARNING! Never direct a water stream toward people or pets, or any electrical device. Failure to heed this warning could result in serious injury.

APPLICATIONS

You may use this product for the purposes listed below:

- Cleaning boats, cars, trucks, motorcycles, outdoor furniture, grills, house siding, driveways, patios and decks.

DETERGENT ADDING AND USE

(See Figure 7-1.)

⚠ CAUTION:

Use only approved pressure washer detergent cleaners. Do not use bleach, chlorine, or any detergents cleaners containing acids.

Use only detergents designed for pressure

washers; household detergents, acids, alkalines, bleaches, solvents, flammable material, or industrial grade solutions can damage the pump. Many detergents may require mixing prior to use. Prepare cleaning solution as instructed on the solution bottle.

To add:

- Disconnect pressure washer from power supply.
- Place pressure washer upright on a flat surface.
- Remove cap from detergent tank.
- Pour detergent into tank.

To use:

The dial is used to control the suction between detergent tanks and increase/decrease detergent flow.

- Turn dial to choose the desired tank.(See Figure 7-2.)
- Connect black soap nozzle to the wand connector.(See Figure 7-3.)
- Squeeze the trigger and the detergent will automatically be mixed with the water and dispensed from the nozzle.

NOTE: Use a funnel, if needed, to prevent accidental spilling of the detergent outside the tank. If any detergent is spilled during the filling process, make sure the unit is cleaned and dried before proceeding.

- Reinstall cap.

PUMP LUBRICANT

The pressure washer pump has been filled with sufficient lubricant at the factory and is maintenance free. You do not need to check or add lubricant to the pump before initial use.

STARTING AND STOPPING THE PRESSURE WASHER (See Figure 8.)

⚠ CAUTION:

Do not run the pump without the water supply connected and turned on.

- Connect the garden hose.
- Turn the garden hose on then squeeze the trigger to relieve air pressure. Once a steady stream of water appears, release the trigger.
- After ensuring the On/Off switch is in the OFF (O) position, connect the pressure washer to

OPERATION

- the power supply.
- Press the reset button on the pressure washer's plug to make sure the unit is ready for operation.
 - Press ON (I) on the switch to start the motor.
 - To stop the motor, release the trigger and press OFF (O) on the switch.

NOTE: The pressure washer may be on and the system may have pressure even when the pump and/or motor cannot be heard running. Always use caution around the pressure washer.






lines to help you choose the best nozzle for your application.

NOTE: Always try nozzles in an inconspicuous area first.

⚠ WARNING! Hold the trigger handle securely with both hands. Expect the trigger handle to move when the trigger is pulled due to reaction forces. Failure to do so could cause loss of control and injury to yourself and others.

USING THE NOZZLES (See Figure 9.)

Each of the nozzles has a different spray pattern. Before starting any cleaning job, determine the best nozzle for the job. The following chart offers some general guide-

| NOZZLE | APPLICATION |
|---|--|
|  | <p>Red - Stream nozzle (0°)</p> <ul style="list-style-type: none"> • The Red 0 degree tip provides a straight line of spray. It provides the highest amount of pressure. It is best used for removing hard, stuck-on grime or dirt. |
|  | <p>Green - Narrow fan tip (25°)</p> <ul style="list-style-type: none"> • The Green pressure washer tip provides high versatility with its 25 degree angle tip. Referred to as the washing tip, because it provides adequate pressure to remove dirt from surfaces, but is designed to not damage many surfaces. This pressure washer tip is designed for "sweeping" foliage or debris given its wide angle. This tip is versatile due to its wide area of cleaning and strong pressure application. |
|  | <p>White - Wide fan tip (40°)</p> <ul style="list-style-type: none"> • The white 40 degree tip, referred to as the "fan" tip creates the widest area of cleaning with relatively low pressure. This pressure washer tip is best used for light or delicate cleaning applications. It is recommended for light cleaning on wood decks and other soft or delicate surfaces. |
|  | <p>Black - Soap nozzle tip</p> <ul style="list-style-type: none"> • The black soap 75 degree tip is referred to as the low pressure nozzle. This is for use with soap application. |
|  | <p>Turbo Nozzle Tip</p> <ul style="list-style-type: none"> • This 0 degree nozzle tip rotates to create a circular spray pattern to break down tough dirt and grime. The spray pattern can cover an area of 4 to 8 inches wide, depending on the distance between the tip and the surface being cleaned. |

OPERATION

TO CONNECT NOZZLE TO SPRAY WAND (See Figure 9)

⚠ WARNING! NEVER change nozzles without engaging the lock-out on the trigger handle and NEVER point the wand at your face or at others. The quick-connect feature contains small springs that could eject the nozzle with some force. Failure to heed this may cause personal injury.

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock-out on the trigger handle by pushing the trigger lock button to the right.
- Pull back the quick-connect collar.
- Push the nozzle into place in the spray wand.
- Push the collar forward so that the nozzle is secured properly. Check to see that the nozzle is secure.

TO DISCONNECT A NOZZLE FROM THE TRIGGER HANDLE ONCE THE CLEANING JOB IS COMPLETE (See Figure 9):

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Remove the nozzle by placing hand over nozzle then pulling back the quick-connect collar. Place nozzle in the nozzle storage area on the trigger handle.

USING THE SPRAY WAND TRIGGER (See Figure 10.)

For greater control and safety, keep both hands on the trigger handle at all times.

- Pull back and hold the trigger to operate the pressure washer.
- Release the trigger to stop the flow of water through the nozzle.

TO ENGAGE THE LOCK-OUT (See Figure 10):

- Push up on the lock-out until it clicks into the slot.

TO DISENGAGE THE LOCK-OUT:

- Push the lock-out down and into its original position. For the most effective cleaning, the spray nozzle should be between 8 in. and 24 in. from the surface to be cleaned. If the spray is too close it can damage the cleaning surface.

OPERATING THE PRESSURE WASHER (See Figure 11.)

Use only detergents designed for pressure washers. Many detergents may require mixing prior to use. Prepare cleaning solution as instructed on the solution bottle.

To clean:

- Pour detergent in the detergent tank.
- Install the black soap nozzle on the spray wand.
- Start the pressure washer and spray the detergent on a dry surface using long, even, overlapping strokes. To prevent streaking, do not allow detergent to dry on the surface.

To rinse:

- Using the 25° nozzle, spray away from the rinsing surface for approximately 10 seconds to allow any remaining detergent to be flushed from the line.
- Start at the top of the area to be rinsed and work down, overlapping the strokes.

NOTE: For the using of the red (0° nozzle), the white (40° nozzle) and the turbo nozzle, please refer to the nozzle application table on page 11.

MOVING THE PRESSURE WASHER

To move the pressure washer (See Figure 2):

- Turn the pressure washer off. Point nozzle in a safe direction and pull trigger to release water pressure.
- Raise the handle up until the release buttons click into the holes on the handle.
- Tilt the machine toward you until it balances on the wheels then roll the machine to the desired position.

OPERATING THE ROTATING BRUSH

After assembling it, trigger the switch of the gun, water will come out, then the brush will rotate and could be used for cleaning.

MAINTENANCE

⚠ WARNING! When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.

⚠ WARNING! Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.

⚠ WARNING! Before inspecting, cleaning or servicing the machine, shut off engine, wait for all moving parts to stop, disconnect unit from power supply, and pull trigger to release water pressure. Failure to follow these instructions can result in serious personal injury or property damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

⚠ WARNING! Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced at an authorized service center.

NOZZLE MAINTENANCE

(See Figure 12.)

Excessive pump pressure (a pulsing sensation felt while squeezing the trigger) may be the result of a clogged or dirty nozzle.

- Unplug the pressure washer.
- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.

- Remove the nozzle from the spray wand.

NOTE: Never point the spray wand at your face

Using a straightened paper clip or nozzle cleaning tool (not provided), free any foreign materials clogging or restricting the nozzle.

- Using a garden hose, flush debris out of nozzle by back flushing (running the water through the nozzle backwards or from the outside to the inside).
- Reconnect the nozzle to the spray wand.
- Turn on the water supply.

STORING THE PRESSURE WASHER

Store in a dry, covered area where the weather can't damage it.

It is important to store this product in a frost-free area. Always empty water from all hoses, the pump, and the detergent container before storing.

NOTE: Use of a pump saver will give you better performance and increase the life of the machine.

QUICK WINTERIZING PROCEDURE

If you cannot do the Optimum Winterizing procedure, you can still protect your pressure washer from winter from winter-damage by doing below:

- Disconnect all water connections.
- Turn on the machine for a few second, unit the remaining water in the pump exits. Turn off immediately.
- Do not allow high-pressure hose to become kinked.
- Store the machine and accessories in a room that does not reach freezing temperatures. Do not store near furnace or other sources of heat as it may dry out the pump seals.

⚠ CAUTION:

Drain gun assembly of any remaining water. Aim gun downwards and squeeze trigger.

SHUTTING DOWN AND CLEANING UP

1) (If you are not using detergent, go directly to Step 2.) When you have finished using the detergent injection system, fill detergent bottle with clean water. Siphon water at low-pressure for one minute so that all detergent is flushed through system. Remove detergent bottle and rinse it thoroughly.

2) Disconnect the garden hose from the water

MAINTENANCE

inlet on the unit.

- Press trigger to release any remaining water pressure.
- Turn the switch to "OFF" (0) position.
- Unplug the power cord from the outlet.
- Engage gun safety lock.

⚠ WARNING! Turn off water supply and squeeze trigger to depressurize the unit. Failure to do so could result in personal injury due to discharge of high-pressure water.

ROTATE BRUSH MAINTENANCE

Dry the brush before storing.

TAKING A BREAK

If taking a break of five minutes or more.

- Engage gun safety lock.
- Turn unit to "OFF" (O) position.
- Unplug the power cord from the outlet.

⚠ CAUTION:

The use of a pump protector is recommended to prevent cold weather damage during storage over the winter months.

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|--------------------------------------|---|---|
| Motor will not start. | On/Off switch is in the "OFF" (O) position. | Turn switch to the "ON" () position. |
| | Power cord is not plugged in. | Plug in power cord. |
| | Electrical outlet does not supply adequate power. | Try a different outlet. |
| | Tripped pressure washer temperature breaker | Allow to cool, and restart unit. |
| | Tripped circuit breaker | Switch off pressure washer, squeeze trigger gun waiting for a steady flow of water emerge from spray nozzle, then turn on the unit. (ensure when you turn on the unit, trigger gun is at "on" position). |
| | Tripped CFCI plug | Press "RESET" button on GFCL plug. |
| Unit does not reach high pressure. | Diameter of garden hose is too small. | Replace with a 1" (25 mm) or 5/8" (16 mm) garden hose. |
| | Water supply is restricted. | Check garden hose for kinks, leaks and blockage. |
| | Not enough water supply. | Open water source fully. |
| | Water inlet filter is clogged. | Remove filter and rinse in warm water. |
| | Power nozzle is in low-pressure position. | Turn power nozzle to high-pressure position. |
| | Pump is sucking air. | Check that hoses and fittings are airtight. Turn "OFF" machine, and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle. |
| Output pressure varies high and low. | Not enough inlet water supply. | Turn water on fully. Check garden hose for kinks, leaks or blockage |
| | Pump is sucking air. | Check that hoses and fittings are airtight. Turn "OFF" machine, and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle. |
| | Water inlet filter is clogged. | Remove filter and rinse with warm water. |

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|--|---|
| (continued) Output pressure varies high and low. | Discharge nozzle is obstructed. | Blow out or remove debris with a fine needle. |
| | Calcified gun, hose or power nozzle. | Run distilled vinegar through detergent tank. |
| Unit does not reach high pressure. | Diameter of garden hose is too small. | Add more detergent. |
| | Detergent bottle or suction tube not properly connected. | Check connections. |
| | Detergent is too thick. | Dilute detergent. |
| | Filter on detergent suction tube is clogged. | Run warm water through filter to remove build-up. |
| | Damaged or clogged detergent suction tube. | Remove obstruction or replace detergent suction tube. |
| | Nozzle is in high-pressure position. | Turn nozzle tip to low-pressure position. |
| | Discharge nozzle is obstructed. | Blow out or remove debris with a fine needle. |
| Garden hose connection leaks. | Loose fittings. | Tighten fittings. |
| | Missing/worn rubber washer. | Insert new washer. |
| Spray wand, extension, or nozzle leaks. | Broken o-ring or plastic insert. | Call the Toll-Free Customer Help Line. |
| Pump is noisy | Pump is sucking air | Check that hoses and fittings are airtight. Turn off machine and purge pump by squeezing trigger gun until a steady flow of water emerges through the nozzle. |
| | Water filter is clogged. | Remove water filter and rinse in warm water. |
| Water leaks from pump (up to 10 drops per minute is permissible). | Loose fittings. | Check that all fittings are tight. |
| | Water seals are damaged or worn. | Call the Toll-Free Customer Help Line. |
| Oil is dripping | Oil seals are damaged or worn. | Call the Toll-Free Customer Help Line. |

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|--------------------------------|---|--|
| Motor buzzes but fails to run. | Supply voltage below minimum. | Verify that only the pressure washer is running on this circuit. |
| | System has residual pressure. | Turn unit "OFF", squeeze trigger on spray wand to release pressure, then turn unit "ON". |
| | Voltage loss due to extension cord. | Unplug any extension cords attached and plug the unit directly into the outlet. |
| | Pressure washer not used for long periods. | Call the Toll-Free Customer Help Line. |
| | Residual friction among components. Unit might hum. | Disconnect water supply and power ON for 2 to 3 seconds, repeat couple times or until the motor starts. |
| | Tripped circuit breaker | Switch off pressure washer, squeeze trigger gun waiting for a steady flow of water emerge from spray nozzle, then turn on the unit. (ensure when you turn on the unit , trigger gun is at "on" position). |
| No Water | Quick connect assembly is attached in reverse. | Verify that Inlet adapter is attached to machine's water inlet and that the quick connect coupler is attached to garden hose. |
| | Water supply is OFF. | Turn ON water supply. |
| | Kink in the garden hose. | Remove kink in garden hose. |

INSTRUCTION ILLUSTRATIONS

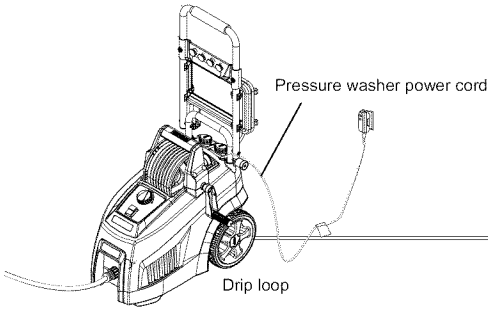


Fig. 1

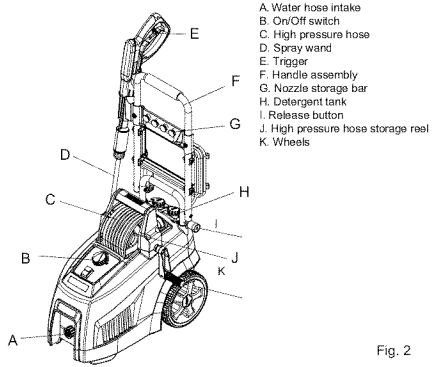


Fig. 2

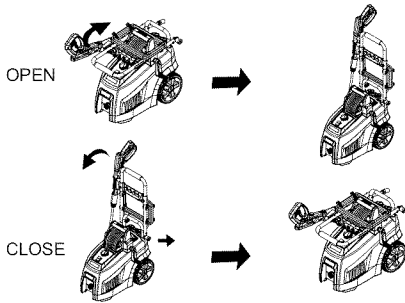


Fig. 3

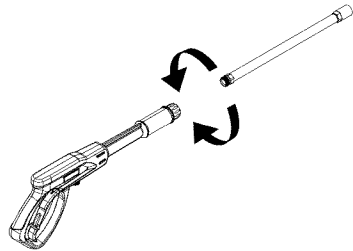


Fig. 4

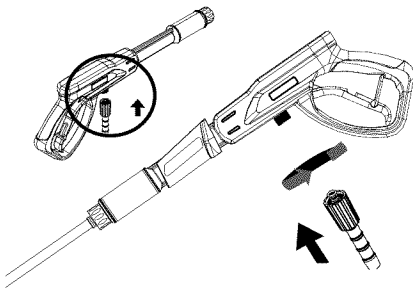


Fig. 5

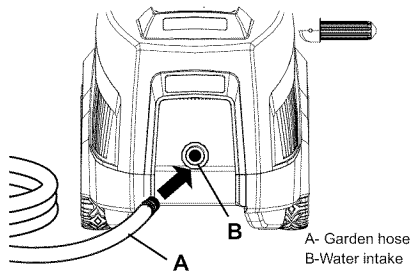


Fig. 6

INSTRUCTION ILLUSTRATIONS

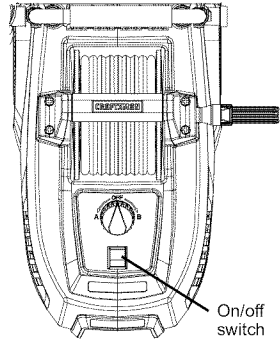
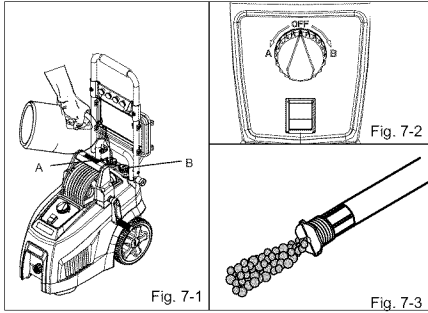


Fig. 8

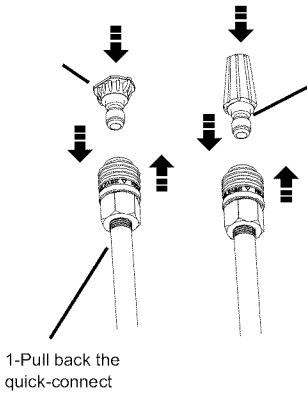


Fig. 9

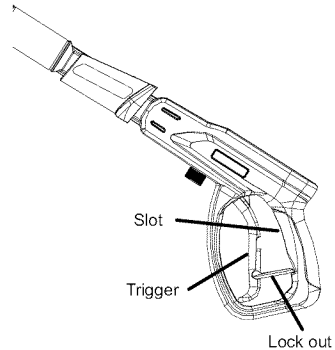


Fig. 10

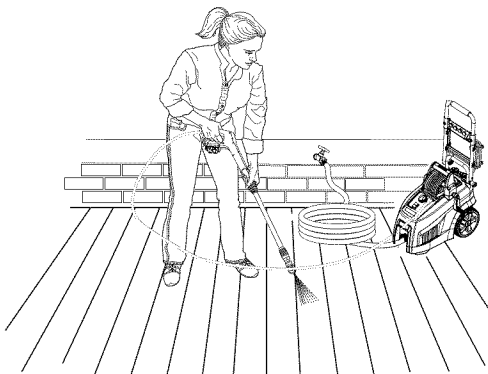


Fig. 11


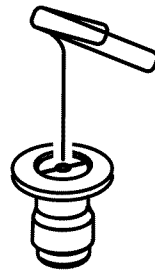


Fig. 12

Always mention the model number when calling to order Pressure Washer parts.

SEE THE BACK PAGE FOR PARTS ORDERING INSTRUCTIONS

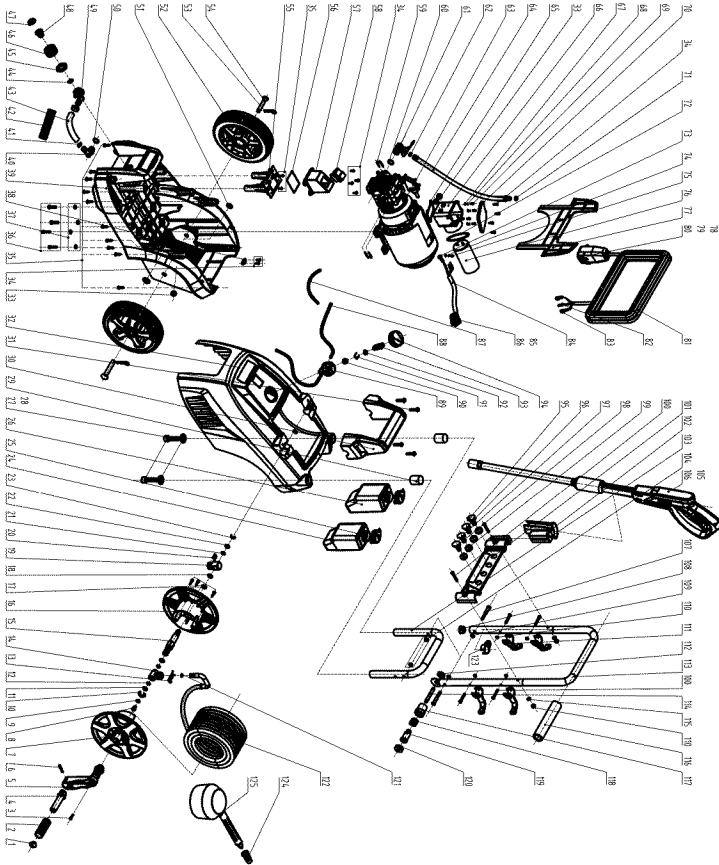

PARTS LIST

| Key No. | Part Number | Description | Qty |
|---------|-------------|------------------|-----|
| 1 | 34116372 | Reel nut | 1 |
| 2 | 34115372 | Reel handle | 1 |
| 3 | 32205316A | Screw | 4 |
| 4 | 34120372 | Reel shaft | 1 |
| 5 | 34119372 | Reel shaft | 1 |
| 6 | 33203363 | Reel pin | 1 |
| 7 | 34117372 | Right reel panel | 1 |
| 8 | 32204363 | Bolt | 1 |
| 9 | 34238302A | O ring | 1 |

PARTS LIST

| Key No. | Part Number | Description | Qty. |
|---------|-------------|-------------------------------|------|
| 10 | 33326319 | Shaft clamp | 1 |
| 11 | 34217319 | Clamp | 2 |
| 12 | 34218319 | O ring | 2 |
| 13 | 33301363 | Pin | 1 |
| 14 | 33220319 | HP hose connecting rotor | 1 |
| 15 | 33203372 | AI shaft | 1 |
| 16 | 34118372 | Left reel panel | 1 |
| 17 | 34209363 | Big rubber clamp | 1 |
| 18 | 34207363 | O ring | 2 |
| 19 | 33205363 | AI Adapt Connector | 1 |
| 20 | 33398363 | U pin | 1 |
| 21 | 34242302A | O ring | 1 |
| 22 | 34208363 | Small clamp | 1 |
| 23 | 33301372 | Clamp | 1 |
| 24 | 34105372 | Tank B | 1 |
| 25 | 34106372 | Tank cover | 2 |
| 26 | 34104372 | Tank A | 1 |
| 27 | 32202363 | Bolt | 2 |
| 28 | 32901363 | Washer | 2 |
| 29 | 34113365 | Ring | 2 |
| 30 | 34107372 | Handle | 1 |
| 31 | 3220335 | Screw | 4 |
| 32 | 34101372 | Upper deck | 1 |
| 33 | 34210301 | Rubber cover 1 | 3 |
| 34 | 32211316A | Screw | 10 |
| 35 | 32209302A | Screw | 12 |
| 36 | 32203319 | Bolt | 4 |
| 37 | 32913301A | Washer | 4 |
| 38 | 34120319 | Pressing cord plate | 1 |
| 39 | 34102372 | Lower deck | 1 |
| 40 | 34125363 | Water inlet 2 | 1 |
| 41 | 33911302 | Clamp | 2 |
| 42 | 33902365 | Spring | 1 |
| 43 | 34904372 | Water inlet hose | 1 |
| 44 | 34213301 | O ring | 1 |
| 45 | 33127302 | Lock nut | 1 |
| 46 | 34124319 | Nut | 1 |
| 47 | 31901301 | Water inlet filter | 1 |
| 48 | 33177307 | Inlet nut connector | 1 |
| 49 | 34115365 | Water inlet 1 | 1 |
| 50 | 34216302A | O ring | 1 |
| 51 | 32308316A | Washer | 2 |
| 52 | 31901372 | Zin wheel | 2 |
| 53 | 32907301A | Pin | 2 |
| 54 | 33201363 | Wheel shaft | 2 |
| 55 | 34109372 | Switch box bracket | 1 |
| 56 | 34201372 | Switch box seal | 1 |
| 57 | 34110372 | Switch box | 1 |
| 58 | 36302301A | Switch | 1 |
| 59 | 33302365 | U pin | 3 |
| 60 | 34212363 | O ring | 1 |
| 61 | 34117365 | Water outlet 1 | 1 |
| 62 | 34205131 | O ring | 1 |
| 63 | 31125363 | Motor and pump assembly | 1 |
| 64 | 31112363 | High pressure connection hose | 1 |
| 65 | 34226316A | Motor seal | 1 |
| 66 | 34101316A | Capacitance junction box | 1 |
| 67 | 32903301A | Small washer | 6 |

PARTS LIST

| Key No. | Part Number | Description | Qty. |
|---------|-------------|--------------------------------|------|
| 68 | 3290675 | Washer 4 | 4 |
| 69 | 32202316A | Screw | 4 |
| 70 | 34118316A | Capacitance junction box cover | 1 |
| 71 | 34238302 | O ring ϕ | 1 |
| 72 | 34201316A | O ring | 1 |
| 73 | 36504301A | R terminal | 1 |
| 74 | 32912301A | Washer | 1 |
| 75 | 32204301A | Screw | 1 |
| 76 | 36488301 | Capacitance | 1 |
| 77 | 34103372 | Wind blocking board | 1 |
| 78 | 36303301-1 | Protector for current leaking | 1 |
| 79 | 34128319 | Cord clamp | 1 |
| 80 | 34120319 | Pressing cord plate | 1 |
| 81 | 31102319 | Cord | 1 |
| 82 | 36502301 | Terminal | 1 |
| 83 | 36501301 | Termina | 7 |
| 84 | 36401363 | GW connecting wire | 1 |
| 85 | 36501301 | Terminal | 7 |
| 86 | 36503301 | Terminal cover | 6 |
| 87 | 34905363 | Suction hose 2 | 1 |
| 88 | 34902372 | Suction hose | 2 |
| 89 | 34117363 | Suction rotor cover | 1 |
| 90 | 34204363 | Suction rubber seal | 1 |
| 91 | 33302363 | U pin | 1 |
| 92 | 34207363 | O ring | 2 |
| 93 | 34118363 | Suction rotor | 1 |
| 94 | 34114372 | Suction rotor | 1 |
| 95 | 31201363 | 0 degree nozzle | 1 |
| 96 | 31205363 | Soap nozzle | 1 |
| 97 | 31204319 | 25 degree nozzle | 1 |
| 98 | 31203363 | 40 degree nozzle | 1 |
| 99 | 34203363 | Nozzle rubber cover | 4 |
| 100 | 32201372 | Screw | 6 |
| 101 | 34111372 | Nozzle store | 1 |
| 102 | 34112372 | Gun holder | 1 |
| 103 | 33202372 | Lower pull rod | 1 |
| 104 | 32201100 | Nut | 2 |
| 105 | 31201372 | Gun handle assembly | 1 |
| 106 | 31202365 | Wand ASSY | 1 |
| 107 | 33204365 | Pull rod shaft | 2 |
| 108 | 34115363 | Pull rod head | 1 |
| 109 | 33305365 | Pull rod washer | 2 |
| 110 | 32205307 | Nut | 6 |
| 111 | 34113372 | Cord hook | 4 |
| 112 | 33205365 | Nut | 2 |
| 113 | 33201372 | Upper pull rod | 1 |
| 114 | 33207365 | Pin | 1 |
| 115 | 32903363 | Washer | 4 |
| 116 | 32903363 | Sponge cover of pull rod | 1 |
| 117 | 34118365 | Pin | 1 |
| 118 | 33901365 | Pin spring | 1 |
| 119 | 33206365 | Pin seat | 1 |
| 120 | 34119365 | Pin cap | 1 |
| 121 | 34209319 | O ring | 1 |
| 122 | 31120363 | HP hose assembly | 1 |
| 123 | 3411135 | Cord hook | 1 |
| 124 | 34123372 | Brush connector | 1 |
| 125 | 34122372 | Round brush | 1 |

Get it fixed, at your home or ours

Your Home

For troubleshooting, product manuals and expert advice:



www.managemylife.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

Sears

® Registered Trademark / TM Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries

® Marca Registrada / TM Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC