






PRESSURE WASHER BREAKDOWN

B275HA

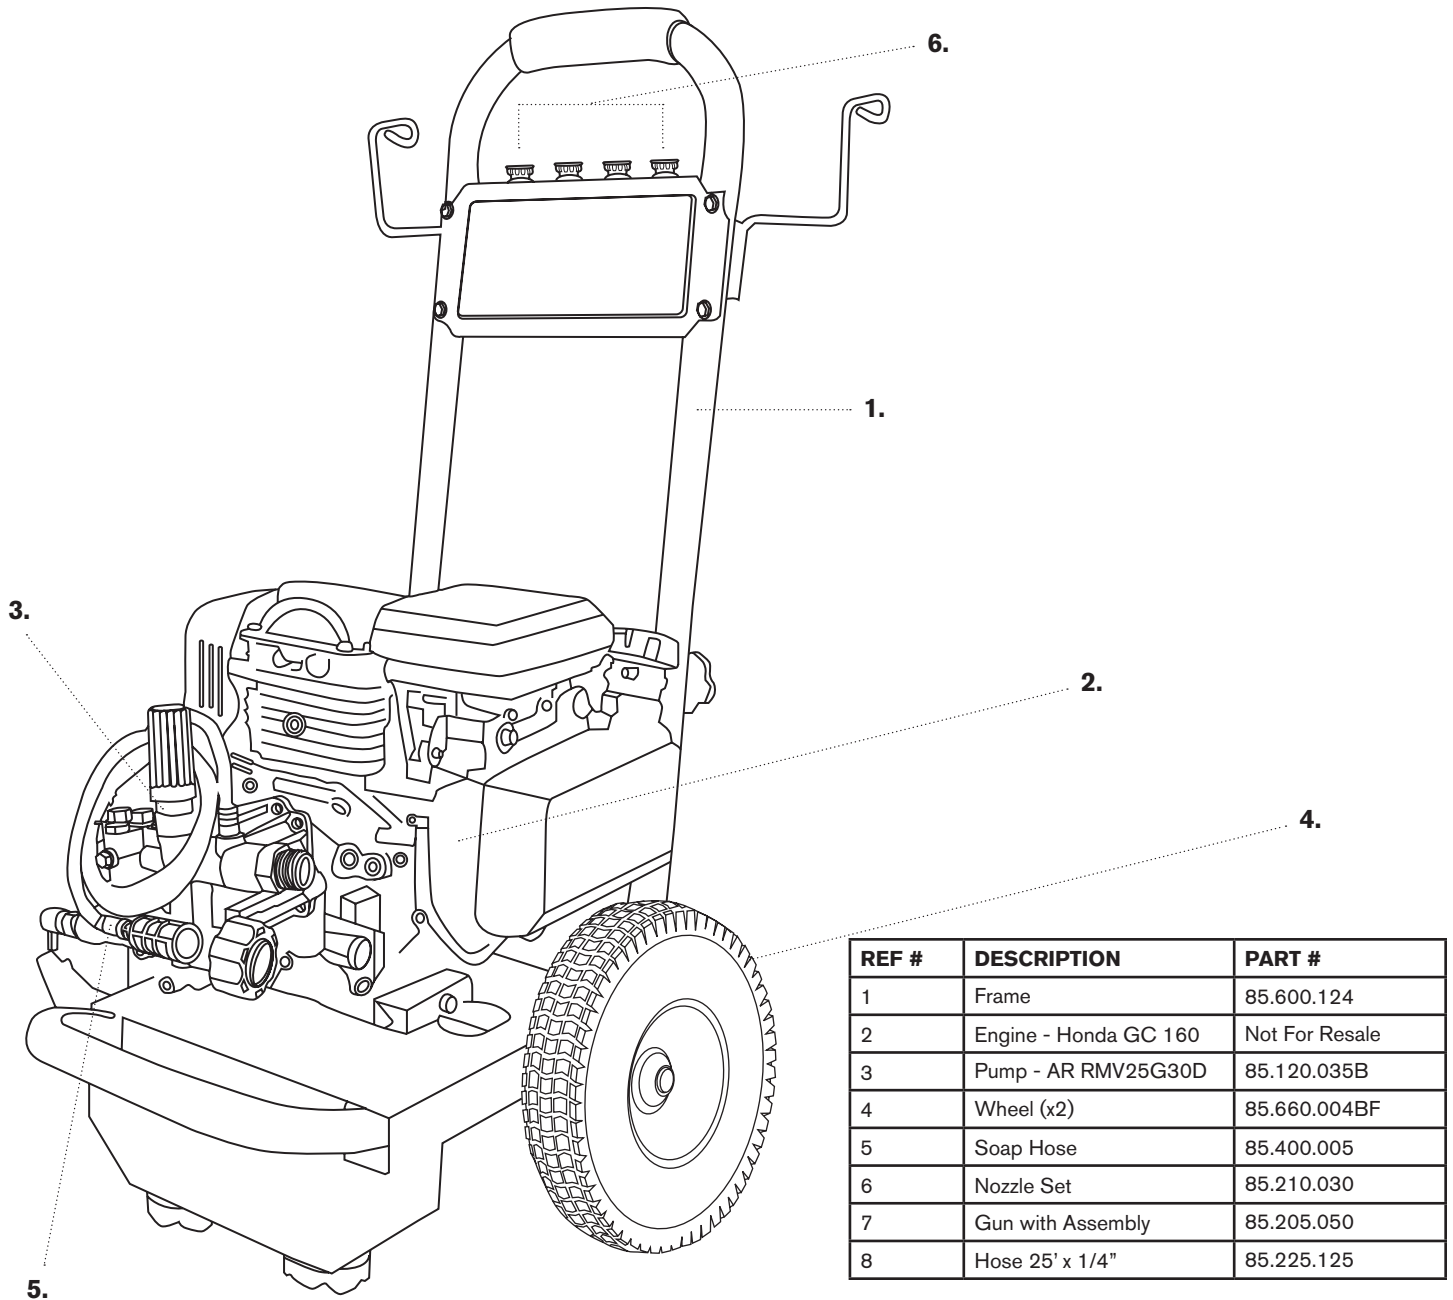

REF #	DESCRIPTION	PART #
1	Frame	85.600.124
2	Engine - Honda GC 160	Not For Resale
3	Pump - AR RMV25G30D	85.120.035B
4	Wheel (x2)	85.660.004BF
5	Soap Hose	85.400.005
6	Nozzle Set	85.210.030
7	Gun with Assembly	85.205.050
8	Hose 25' x 1/4"	85.225.125

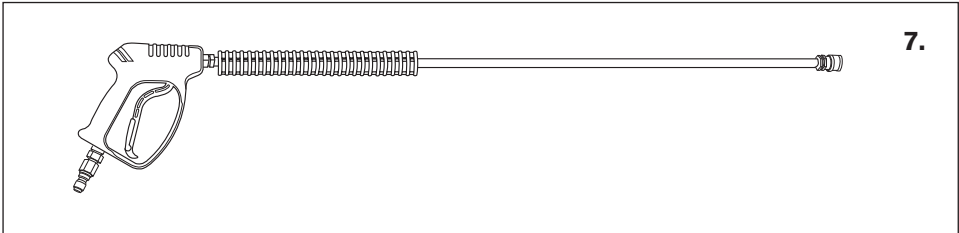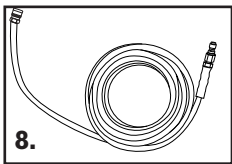




PRESSURE WASHER BREAKDOWN

B275HA


85.550.052 - Maintenance Kit:

- Oil cap
- Air filter
- Spark plug
- 1 LTR Oil


* For other replacement parts,
please contact your local Honda
dealer.

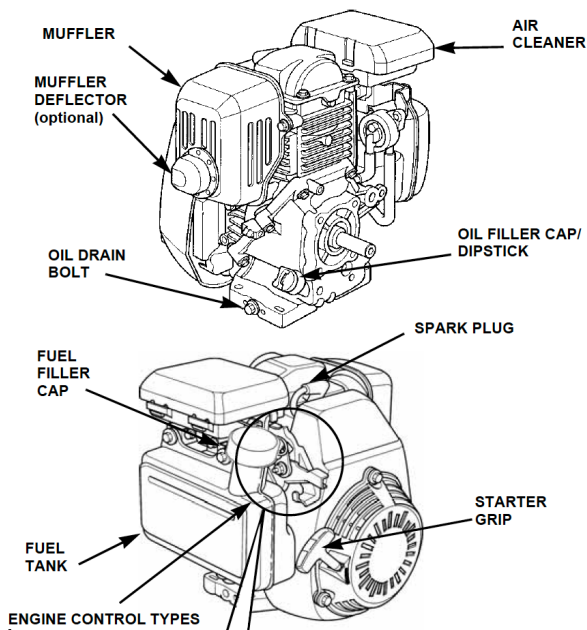


TYPE 1: MANUAL THROTTLE / MANUAL CHOKE

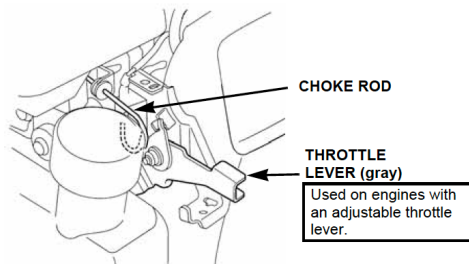

TYPE 2: FIXED THROTTLE / IGNITION SWITCH LEVER / MANUAL CHOKE

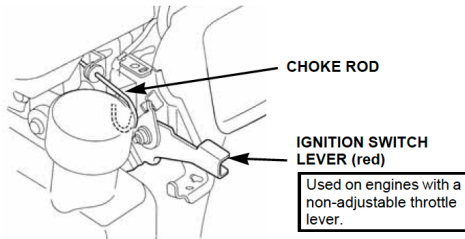


TYPE 3: FIXED THROTTLE / ENGINE STOP SWITCH / MANUAL CHOKE

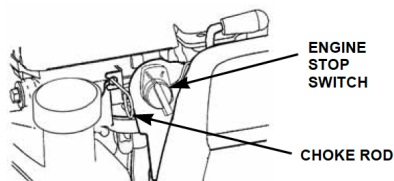









PRESSURE WASHER BREAKDOWN

B275HA

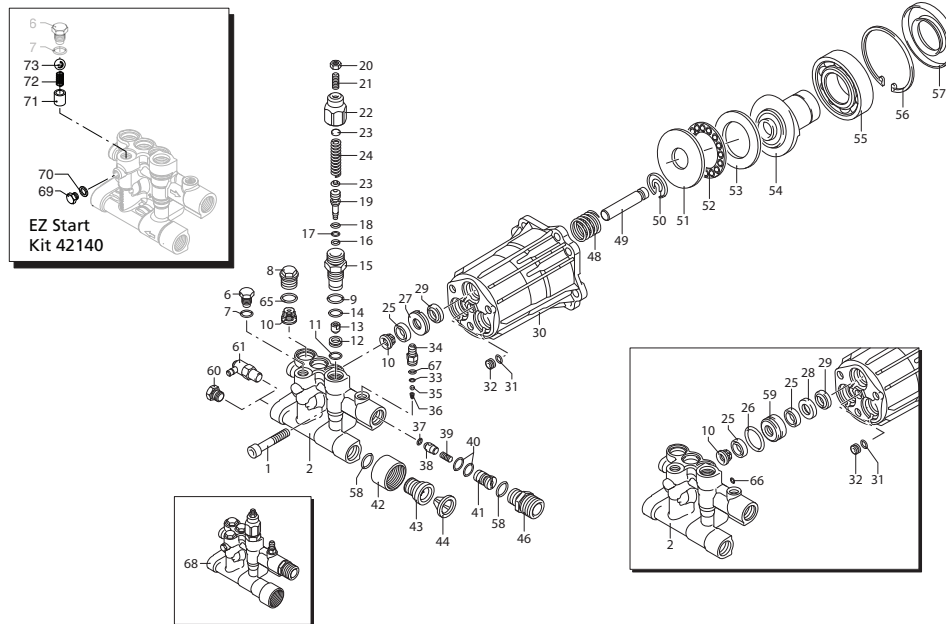

Repair Kits

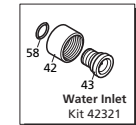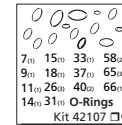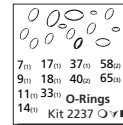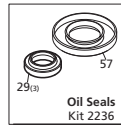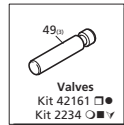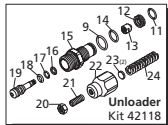

Pos	Code	Description	Qty	Pos	Code	Description	Qty	Pos	Code	Description	Qty
1	380410	Screw	(221 in/lbs) ✓ □ 3	30	2840230	Pump body	1	57	2841050	Ring	1
2	800220	Screw	(221 in/lbs) □ 3	31	480560	O-Ring ø 6.75x1.78	1	58	2840890	O-Ring ø 14x2	2
3	2841730	Head	✓ 1	32	2840710	Plug	1	59	1683500	Oil seal	3
4	2840022	Head	■ 1	33	480480	O-Ring ø 4.48x1.78	1	60	2840840	Plug	✓ 1
5	2840870	Head	○ 1	34	1982520	Hose tail ø 8	(35 in/lbs) 1	61	480650	Washer	1
6	2841620	Head	□ 1	35	3700240	Hose tail ø 8	(35 in/lbs) ✓ 1	62	TPP1401/4A	Thermal relief valve	1
7	2840830	Screw	(89 in/lbs) 1	36	1250280	Ball	1	63	1060100	Ball	✓ 1
8	600180	O-Ring ø 7.66x1.78	1	37	1560520	Spring	1	64	2840440	Seat	✓ 1
9	2841530	Valve cap	(221 in/lbs) 3	38	1460431	O-Ring ø 4x2.5	1	65	2840450	Spring	✓ 1
10	740290	O-Ring ø 14x1.78	1	39	2841150	Shutter	1	66	2841520	O-Ring ø 13.5x1.8	3
11	2849051	Complete Valve	● 1	40	3700220	Jet	✓ 1	67	3400650	Plug	1
12	2849050	Complete Valve	✓ ■ □ 6	41	1343580	Spring	1	68	480650	Washer	✓ 1
13	1470210	O-Ring ø 9x1	1	42	800560	O-Ring ø 8.73x1.78	2	69	2849284	Complete head assembly	✓ 1
14	2840770	Seat	● 1	43	2840340	Injector	1	70	2840840	Plug (EZ start pump only)	1
15	2841080	Seat	✓ ■ □ 1	44	3700200	Detergent injector	✓ 1	71	480650	Washer (EZ start pump only)	1
16	2840760	Shutter	(27 in/lbs) 1	45	2840270	Fitting	○ 1	72	2840441	Seat (EZ start pump only)	1
17	820510	O-Ring ø 10.82x1.78	1	46	2841220	Fitting 3/4" NH	✓ 1	73	2840450	Spring (EZ start pump only)	1
18	2840750	Piston guide	(177 in/lbs) 1	47	2841230	Fitting Aluminium	(221 in/lbs) ✓ 1		1060100	Ball (EZ start pump only)	1
19	2760210	Ring	1	48	2840390	Fitting Brass	(221 in/lbs) □ 1		AR64545	Oil	1
20	660190	O-Ring ø 6.07x1.78	1	49	7369	Filter	1		OIL CAPACITY - 2.2 OZ		
21	2260100	O-Ring ø 6.02x2.62	1	50	2840400	Fitting 3/8" G M	(221 in/lbs) ○ 1				
22	2841140	Piston	1	51	2841380	Fitting	(221 in/lbs) ■ 1				
23	1060120	Nut M6	1	52	2841120	Fitting	(221 in/lbs) □ 1				
24	392840	Screw M6x16	1	53	2840060	Spring	3				
25	2760480	Insert	1	54	2840040	Piston ø 12	✓ 3				
26	1980220	Wobble plate	2	55	2840530	Piston ø 12	■ □ 3				
27	2760410	Spring	1	56	2840050	Lock	3				
28	2200141	Water seal	✓ 3	57	1980130	Fifth wheel	1				
29	2200141	Water seal	□ 6	58	1980250	Fifth wheel	1				
	770260	O-Ring ø 23.52x1.78	3	59	1980240	Fifth wheel	1				
	770590	O-Ring ø 21.95x1.78	3	60	2840050	Wobble plate	1				
	2840561	Bushing ø 12	3	61	2840900	Wobble plate	1				
	2840550	Bushing ø 12	3	62	2840720	Wobble plate	✓ 1				
	2840540	Bushing ø 12	3	63	2840730	Wobble plate	□ 1				
	2840561	Bushing	✓ 3	64	161060	Bearing	1				
	1683500	Oil seal	✓ □ 3	65	161050	Ring ø 72	1				

Legend

ø 12	ø 12	ø 12
For ○	For ●	For □
RMV2G25 (Brass)	RMV25G30 (Brass)	RMV22G25-EZ (Brass)
	RMV25G30-EZ (Brass)	
For ■		For ✓
RMV25G24 (Alum)		RMV22G24 (Alum)