

The ***Chore Master***[®] by Mi-T-M[®]

PARTS LIST FOR *CV-2100-4MBC*

Briggs & Stratton:

Engine Oil Grade:

Engine Oil Capacity:

Pump Oil Grade:

Pump Oil Capacity:

Nozzle Size:

Above 40°F=SAE 30

Below 40°F=SAE10W-30

18 oz.

75W90 Synthetic

3.5 oz.

1.20 mm

This Parts Listing has been compiled for your benefit. You can be assured your Mi-T-M Cold Water Pressure Washer was constructed and designed with quality and performance in mind using over 25 years experience in the pressure washer business. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Mi-T-M reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine Mi-T-M parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. NEVER make adjustments on machinery while the unit is connected to the power source. Turning over the machinery by hand during adjustment or cleaning might start the machinery, causing serious injury to the operator.
- 3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
- 4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area.
- 5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

SPECIFICATIONS.....3


FRAME ASSEMBLY FOR CV-2100-4MBC4

PUMP ASSEMBLY (3-0290)6

SPECIFICATIONS

MODEL NUMBER	CV-2100-4MBC
Operating Pressure (PSI/Bar):	2100/145
High Pressure Nozzle:	1.20 mm
Water Volume (GPM/lpm):	2.0/7.6
Engine:	Briggs & Stratton
Horsepower	4.0
Engine Type	4 Stroke, Overhead Valve, Single Cylinder
Oil Type	Above 40°F = SAE30 / Below 40°F = SAE10W-30
Oil Capacity (oz./liters)	18/.5
Fuel Type	Unleaded Gasoline 86 Octane Minimum
Fuel Capacity (quarts/ liters)	1/0.95
Starting	Recoil
Maximum No Load RPM	3700 (+/- 100) RPM
Pump:	Direct Driven, Oil Bath, Triplex Axial Piston
Oil Type	75W90 Synthetic
Oil Capacity (oz./liters)	3.5/0.1
Plungers	Stainless Steel
Manifold	Aluminum
Valves	Plastic
Unloader	Preset
Detergent Injector	Low pressure down stream from pump
Unit Net Weight (lbs/Kg)	54/24.5
Unit Shipping Weight (lbs/Kg)	64/29.5
Unit Net Dimension (in/cm)	26Lx18Wx38H/ 66Lx45.7Wx96.5H
Unit Shipping Dimension (in/cm)	23.5Lx18.5Wx23H/ 59.7Lx47Wx58.5H


FRAME ASSEMBLY FOR CV-2100-4MBC

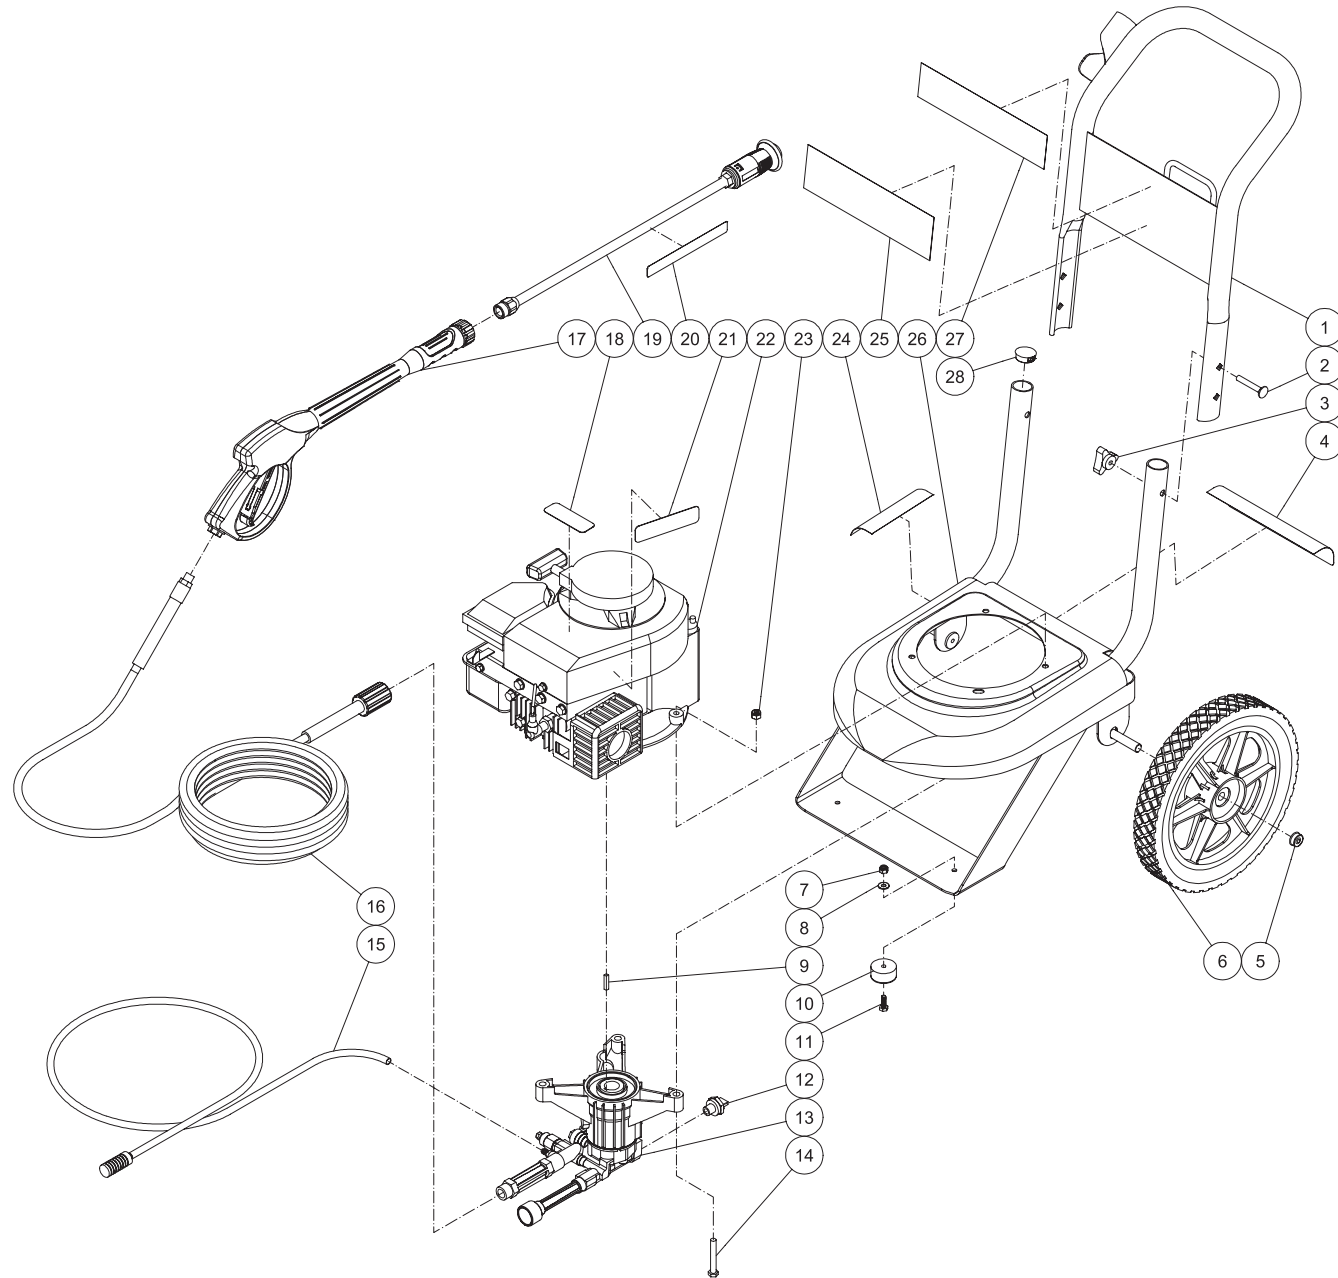

CV-2100-4MBC-050908-PJH

FRAME ASSEMBLY FOR CV-2100-4MBC								
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Handle	7-0203A01	1		16	Pressure Hose	15-0239	1
2	Bolt	31-0051	2		17	Gun/Wand	16-0442	1
3	Knob	7-0107	2		18	Decal- Caution: Allow to Cool (See 34-9042)	N/A Sep.	1
4	Decal- Warn/Caution/Oper. (See 34-9042)	N/A Sep.	1		19	Lance	16-0388	1
5	Hub Cap	33-0055	2		20	Decal- Warning: Risk of Injection (See 34-9042)	N/A Sep.	1
6	Wheel	14-0111	2		21	Decal- Warning: Muffler Hot (See 34-9042)	N/A Sep.	1
7	Locknut	30-0155	2		22	Engine- 4.0 HP Briggs & Stratton	1-0144	1
8	Washer	28-0002	2		23	Locknut	30-0157	3
9	Key	43-0082	1		24	Decal- Data Plate	N/A	1
10	Isolator	14-0069	2		25	Decal- Warning/Caution/Operation (See 34-9042)	N/A Sep.	1
11	Bolt	27-0015	2		26	CV Base Assy	5-0270A01	1
12	Thermal Relief Valve	22-0208	1		27	Decal- Mi-T-M Logo	34-2101	1
13	Pump	3-0290	1		28	Plug	62-0200	2
14	Bolt	27-0072	3			Safety Decal Kit (Inc. 4, 18, 20-21, 25)	34-9042	
15	Detergent Hose w/ Strainer	19-0233	1					

PUMP ASSEMBLY (3-0290)

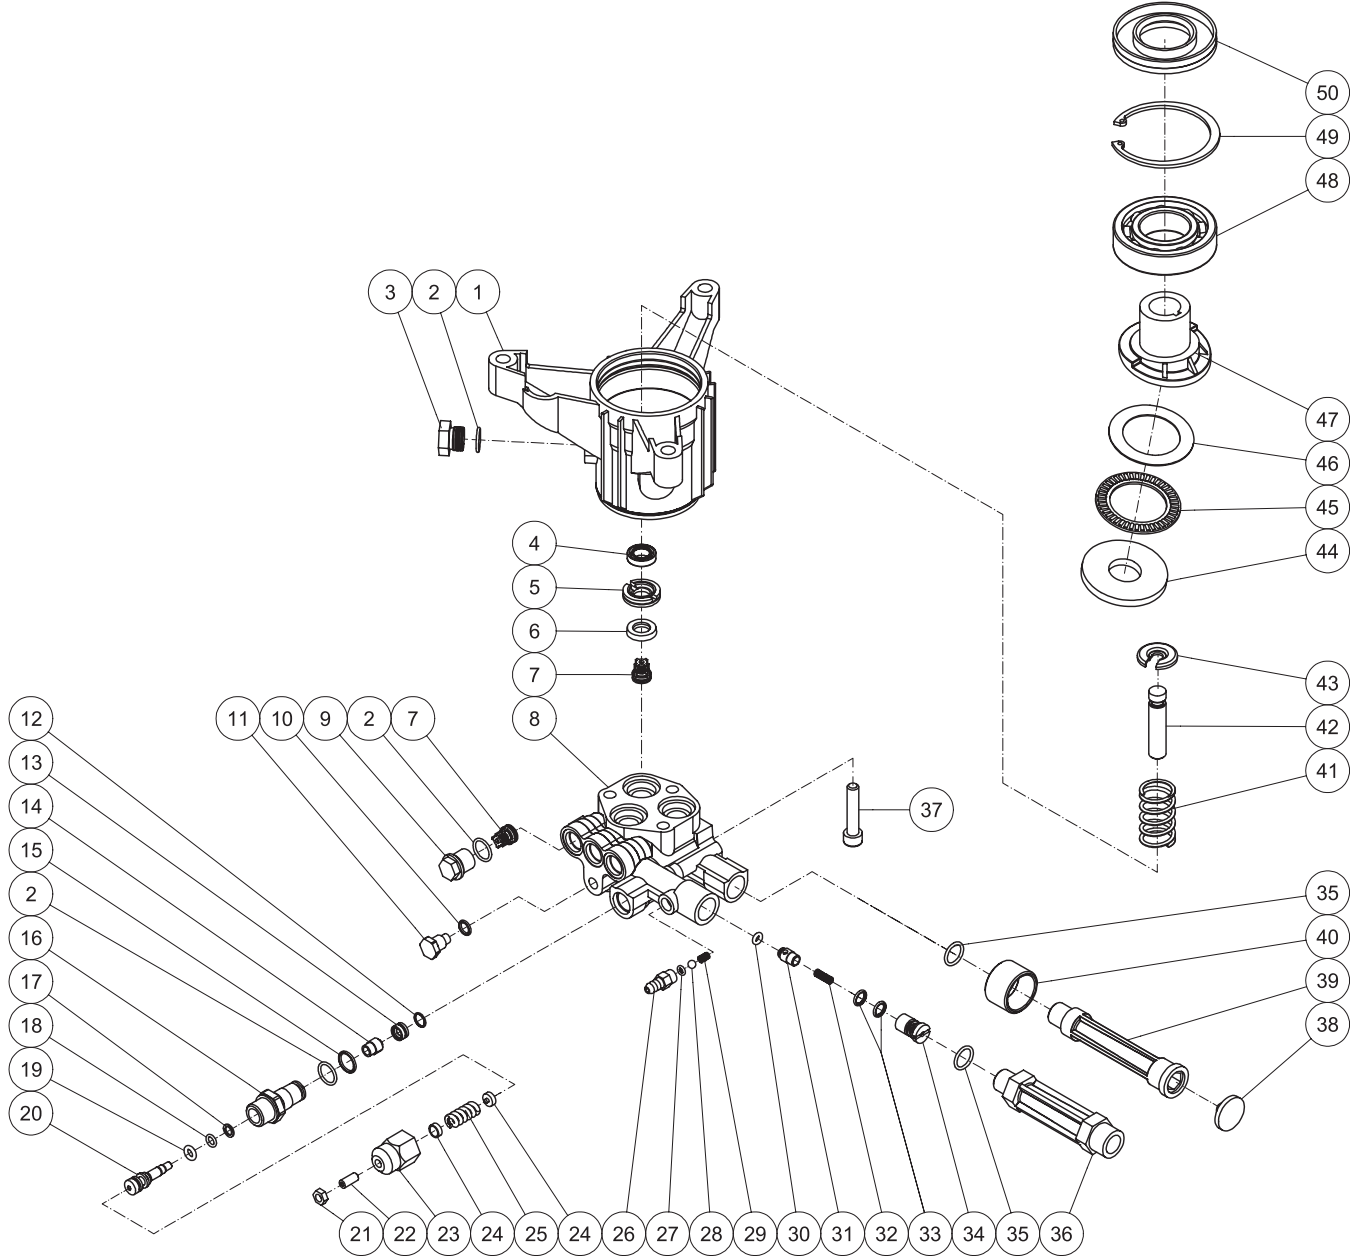

3-0290-111506-JJT

PUMP ASSEMBLY (3-0290)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Pump Housing	-	1	20	Unloader Piston	8-0565	1	39	Inlet Extension	46-1179	1
2	O-ring	25-0325	5	21	Nut	30-6024	1	40	Garden Hose Fitting	46-1178	1
3	Plug	39-0203	1	22	Set Screw	27-9587	1	41	Spring	49-0160	3
4	Piston Oil Seal	-	3	23	Adjustment Barrel	8-0564	1	42	Piston	-	3
5	Packing Retainer	46-1177	3	24	Spring Button	8-0501	2	43	Spring Retainer	46-1183	3
6	High Pressure Seal	-	3	25	Unloader Spring	49-0157	1	44	Thrust Washer	46-0876	1
7	Valve Complete	-	6	26	Hose Barb	56-0869	1	45	Bearing	48-0057	1
8	Pump Head	46-1258	1	27	O-ring	25-0371	1	46	Thrust Washer	48-0056	1
9	Valve Cap	39-0218	3	28	Ball	8-0521	1	47	Wobble Plate Shaft	46-1184	1
10	O-ring	25-0382	1	29	Spring	8-0520	1	48	Ball Bearing	48-0014	1
11	Grub Screw	27-9599	1	30	O-ring	25-0406	1	49	Snap Ring	46-1185	1
12	O-ring	25-0500	1	31	Non-Return Valve	46-1180	1	50	Oil Seal	26-0290	1
13	Unloader Seat	8-0570	1	32	Spring I.D	49-0159	1		Unloader (Inc. 1, 1, 2, 1 each 2, 12-22, 24, 25)	70-0446	
14	Unloader Poppett	8-0569	1	33	O-ring	25-0403	2		Valves (Inc. 6 each 7)	70-0409	
15	O-ring	25-0387	1	34	Detergent Injector	46-1181	1		Pistons (Inc. 3 each 42)	70-0410	
16	Piston Guide	8-0566	1	35	O-ring	25-0536	2		Water Seals (Inc. 3 each 6)	70-0464	
17	Back-up Ring	25-0589	1	36	Outlet Extension	46-1182	1		Oil Seals (Inc. 3, 1 each 4, 50)	70-0412	
18	O-ring	-	1	37	Bolt	27-9590	3		O-ring (Inc. 5, 1, 1, 1, 1, 1, 1, 2, 2 each 2, 12, 15, 18, 19, 27, 30, 33, 35)	70-0413	
19	O-ring	25-0526	1	38	Inlet Filter	19-0001	1				

